TOSHIBA

FILE NO. 020-9802

SERVICE MANUAL

COLOR TELEVISION

N8ES Chassis

CE27H15, CF27H50

(TAC9807) (TAC9815)

PRINTED IN U.S.A. Mar., 1998 (So)

TABLE OF CONTENTS

CHAPTER 1 GENERAL ADJUSTMENTS

SAFETY INSTRUCTIONS 3
SET-UP ADJUSTMENT 4
SERVICE MODE 8
DESIGN MODE 11
ELECTRICAL ADJUSTMENTS 12
CIRCUIT CHECKS 16

CHAPTER 2 SPECIFIC INFORMATIONS

SETTING & ADJUSTING DATA 17
LOCATION OF CONTROLS 18
PROGRAMMING CHANNEL MEMORY 20
CIRCUIT BLOCK DIAGRAM 21
CHASSIS AND CABINET REPLACEMENT PARTS LIST 22
PC BOARDS BOTTOM VIEW 31
TERMINAL VIEW OF TRANSISTORS 34
SPECIFICATIONS 37
APPENDIX:
CIRCUIT DIAGRAM

CHAPTER 1 GENERAL ADJUSTMENTS

SAFETY INSTRUCTIONS

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" INSTRUCTIONS BELOW.

X-RAY RADIATION PRECAUTION

1. Excessive high voltage can produce potentially hazardous X-RAY RADIATION. To avoid such hazards, the high voltage must not be above the specified limit. The nominal value of the high voltage of this receiver is Ⓐ kV at zero beam current (minimum brightness) under a 120V AC power source. The high voltage must not, under any circumstances, exceed Ⓑ kV.

   Refer to table 1 for high voltage Ⓐ, Ⓑ. (See SETTING & ADJUSTING DATA on page 17.)

   Each time a receiver requires servicing, the high voltage should be checked following the HIGH VOLTAGE CHECK procedure in this manual. It is recommended that the reading of the high voltage be recorded as a part of the service record. It is important to use an accurate and reliable high voltage meter.
2. This receiver is equipped with a Fail Safe (FS) circuit which prevents the receiver from producing an excessively high voltage even if the B+ voltage increases abnormally. Each time the receiver is serviced, the FS circuit must be checked to determine that the circuit is properly functioning, following the FS CIRCUIT CHECK procedure in this manual.
3. The only source of X-RAY RADIATION in this TV receiver is the picture tube. For continued X-RAY RADIATION protection, the replacement tube must be exactly the same type tube as specified in the parts list.
4. Some part in this receiver have special safety-related characteristics for X-RAY RADIATION protection. For continued safety, parts replacement should be undertaken only after referring to the PRODUCT SAFETY NOTICE below.

SAFETY PRECAUTION

WARNING : Service should not be attempted by anyone unfamiliar with the necessary precautions on this receiver. The following are the necessary precautions to be observed before servicing this chassis.

1. An isolation transformer should be connected in the power line between the receiver and the AC line before any service is performed on the receiver.
2. Always discharge the picture tube anode to the CRT conductive coating before handling the picture tube. The picture tube is highly evacuated and if broken, glass fragments will be violently expelled. Use shatter proof goggles and keep picture tube away from the unprotected body while handling.
3. When replacing a chassis in the cabinet, always be certain that all the protective devices are put back in place, such as; non-metallic control knobs, insulating covers, shields, isolation resistor-capacitor network, etc.
4. Before returning the set to the customer, always perform an AC leakage current check on the exposed metallic parts of the cabinet, such as antennas, terminals, screwheads, metal overlays, control shafts, etc. to be sure the set is safe to operate without danger of electrical shock. Plug the AC line cord directly into a 120V AC outlet (do not use a line isolation transformer during this check). Use an AC voltmeter having 5000 ohms per volt or more sensitivity in the following manner:

   Connect a 1500 ohm 10 watt resistor, paralleled by a 0.15 µF, AC type capacitor, between a known good earth ground (water pipe, conduit, etc.) and the exposed metallic parts, one at a time. Measure the AC voltage across the combination of 1500 ohm resistor and 0.15 µF capacitor. Reverse the AC plug at the AC outlet and repeat AC voltage measurements for each exposed metallic part. Voltage measured must not exceed 0.3 volts rms. This corresponds to 0.2 milliamp. AC. Any value exceeding this limit constitutes a potential shock hazard and must be corrected immediately.

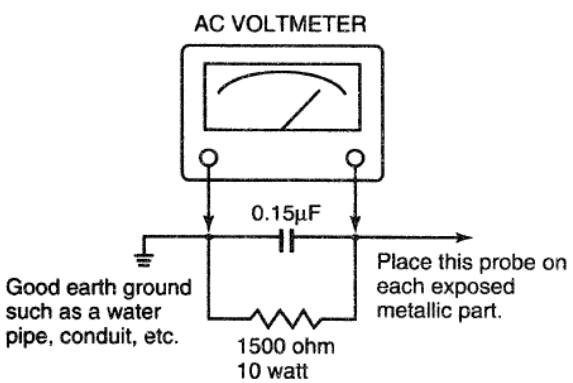
AC VOLTMETER
0.15µF
Good earth ground such as a water pipe, conduit, etc.
Place this probe on each exposed metallic part.
1500 ohm 10 watt

PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These characteristics are often passed unnoticed by a visual inspection and the protection afforded by them cannot necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this manual and its supplements; electrical components having such features are identified by the international hazard symbols on the schematic diagram and the parts list.
Before replacing any of these components, read the parts list in this manual carefully. The use of substitute replacement parts which do not have the same safety characteristics as specified in the parts list may create shock, fire, X-ray radiation or other hazards.

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 3 OF THIS MANUAL.

SET-UP ADJUSTMENT (FOR 13", 14", 19", 20")

■ The following adjustments should be made when a complete realignment is required or a new picture tube is installed. Perform the adjustments in order as follows :

1. Color Purity
2. Convergence
3. White Balance

Note: The PURITY/CONVERGENCE MAGNET assembly and rubber wedges need mechanical positioning. Refer to figure 1.

* There are no adjustment of purity and convergence in some picture tube (unified with purity magnet).

COLOR PURITY ADJUSTMENT

NOTE : Before attempting any purity adjustments, the receiver should be operated for at least fifteen minutes.

1. Demagnetize the picture tube and cabinet using a degaussing coil.
2. Set the brightness and contrast to maximum.
3. Use a green raster from among the built-in test signals.
4. Loosen the clamp screw holding the yoke and slide the yoke backward or forward to provide vertical green belt (zone) in the picture screen.
5. Remove the Rubber Wedges.
6. Rotate and spread the tabs of the purity magnet (See figure 2.) around the neck of the picture tube until the green belt is in the center of the screen. At the same time, enter the raster vertically.
7. Slowly move the yoke forward or backward until a uniform green screen is obtained. Tighten the clamp screw of the yoke temporarily.
8. Check the purity of the red and blue raster.

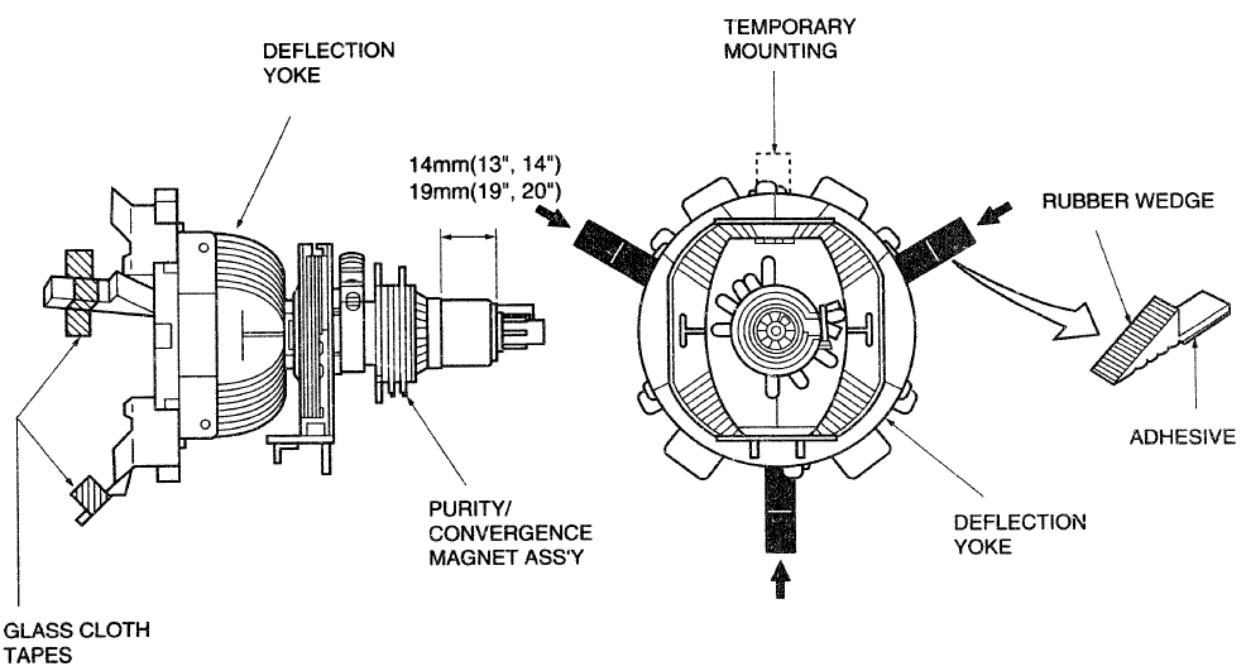

Figure 1.

CONVERGENCE ADJUSTMENTS

NOTE: Before attempting any convergence adjustments, the receiver should be operated for at least fifteen minutes.

■ CENTER CONVERGENCE ADJUSTMENT

1. Use the cross-dot pattern from among the built-in test signals.
2. Set the brightness and contrast for well defined pattern.
3. Adjust two tabs of the 4-Pole Magnets to change the angle between them (See figure 2.) and superimpose red and blue vertical lines in the center area of the picture screen.
4. Turn the both tabs at the same time keeping the angle constant to superimpose red and blue horizontal lines at the center of the screen.
5. Adjust two tabs of 6-Pole Magnets to superimpose red/blue line and green one. Adjusting the angle affects the vertical lines and rotating both magnets affects the horizontal lines.
6. Repeat adjustments 3, 4, 5 keeping in mind red, green and blue movement, because 4-Pole Magnets and 6-Pole Magnets have mutual interaction and make dot movement complex.

■ CIRCUMFERENCE CONVERGENCE ADJUSTMENT

1. Loosen the clamping screw of deflection yoke slightly to allow the yoke to tilt.
2. Temporarily put a wedge as shown in figure 1. (Do not remove cover paper on adhesive part of the wedge.)
3. Tilt front of the deflection yoke up or down to obtain better convergence in circumference. (See figure 3.) Push the mounted wedge into the space between picture tube and the yoke to fix the yoke temporarily.
4. Put other wedge into bottom space and remove the cover paper to stick.
5. Tilt front of the yoke right or left to obtain better convergence in circumference. (See figure 3.)
6. Keep the yoke position and put another wedge in either upper space. Remove cover paper and stick the wedge on picture tube to fix the yoke.
7. Detach the temporarily mounted wedge and put it in another upper space. Stick it on picture tube to fix the yoke.
8. After fixing three wedges, recheck overall convergence. Tighten the screw firmly to fix the yoke and check the yoke is firm.
9. Stick three adhesive tapes on wedges as shown in figure 1.

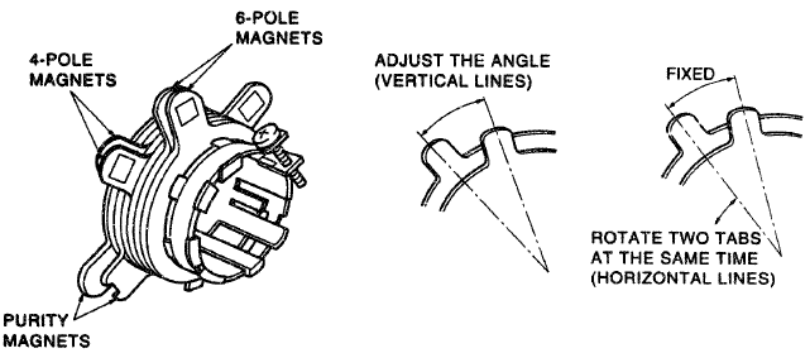

Figure 2.

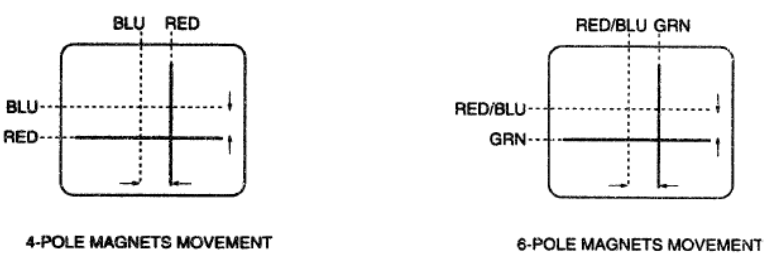

Center Convergence by Convergence Magnets

Circumference Convergence by DEF Yoke

Figure 3. Dot Movement Pattern

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 3 OF THIS MANUAL.

(FOR 35", 36")

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed. Perform the adjustments in order as follows :
  1. Color Purity
  2. Convergence
  3. White Balance

  Note: The PURITY/CONVERGENCE MAGNET assembly and rubber wedges need mechanical positioning. Refer to figure 1.
- There are no adjustment of purity and convergence in some picture tube (unified with purity magnet).

COLOR PURITY ADJUSTMENT

NOTE : Before attempting any purity adjustments, the receiver should be operated for at least fifteen minutes.

1. Evenly degauss the entire screen.
2. Set the CONTRAST and BRIGHTNESS Controls to the maximum.
3. Display built-in green raster using the TEST SIGNAL SELECTION function.
4. Loosen the clamp screw holding the deflection yoke (and remove the Rubber Wedges).
5. Slide the yoke forward or backward to provide vertical green belt (zone) in the picture screen.
6. Rotate and spread the tabs of the purity magnet (See figure 4.) around the neck of the picture tube until the green belt is in the center of the screen. At the same time, center the raster vertically by adjusting the magnet as shown below.

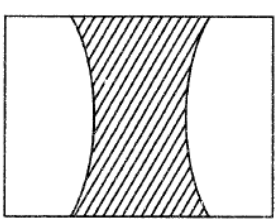

Green Belt

7. Move the yoke slowly forward or backward until a uniform green screen is obtained. Tighten the clamp screw of the yoke temporarily.
8. Check the purity of the red and blue raster.
9. Put four wedges into the space between the picture tube and the yoke to hold the yoke in the adjusted position. (See figure 2.)
   Do not tilt the yoke by excessive insertion of the wedge.
10. Remove cover paper of wedge and stick wedges on the tube to fix the yoke in the adjusted position.
    Fix the wedges with glass cloth tapes.

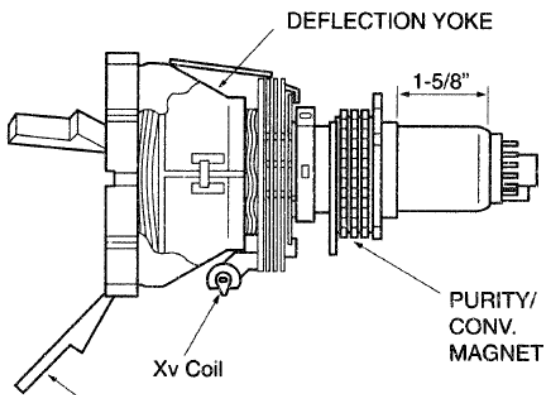

Figure 1.

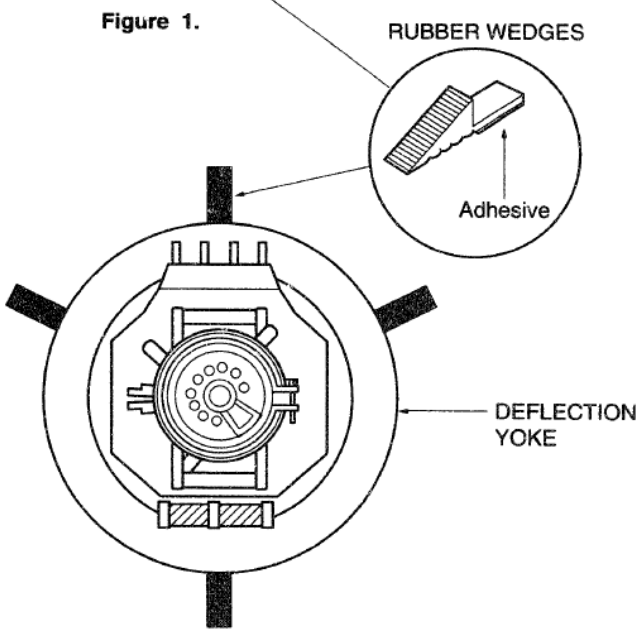

Figure 2.

CONVERGENCE ADJUSTMENTS

NOTE: Before attempting any convergence adjustments, the receiver should be operated for at least fifteen minutes.

■ CENTER CONVERGENCE ADJUSTMENT

1. Display built-in cross-dot pattern using the TEST SIGNAL SELECTION function.
2. Adjust the BRIGHTNESS and CONTRAST Controls for well defined pattern.
3. Loosen the tightening ring and adjust two tabs of the 4-Pole Magnets to change the angle between them (See figure 4.) and superimpose red and blue vertical lines in the center area of the picture screen. (See figure 3.)
4. Turn the both tabs at the same time keeping the constant angle to superimpose red and blue horizontal lines at the centre of the screen. (See figure 3.)
5. Adjust two tabs of 6-Pole Magnets to superimpose red/blue line with green one. Adjusting the angle affects the vertical lines and rotating both magnets affects the horizontal lines.
6. Repeat adjustments 3, 4, 5 keeping in mind red, green and blue movement, because 4-Pole Magnets and 6-Pole magnets interact and make dot movement complex.
7. After completing the "CENTER CONVERGENCE ADJUSTMENT", tighten the tightening ring to fix the magnets.

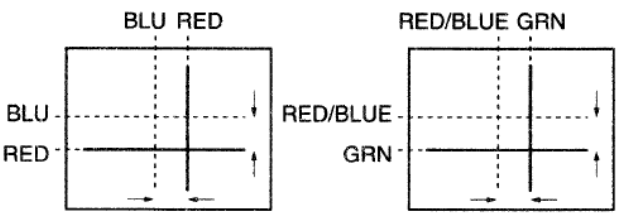

Center Convergence by Convergence Magnets

Figure 3.

■ Xv COIL ADJUSTMENT

Adjust the Xv coil (on the deflection yoke) to correct misconvergence at both sides on screen.
Use a hexagonal tip stick (plastic) to adjust the core of coil.

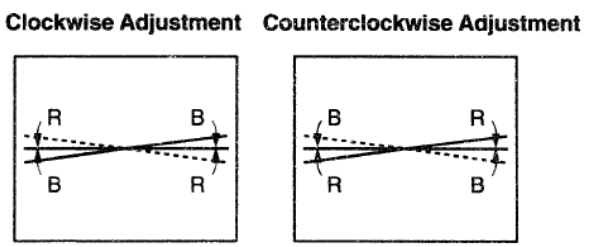

X_V Cross Pattern View

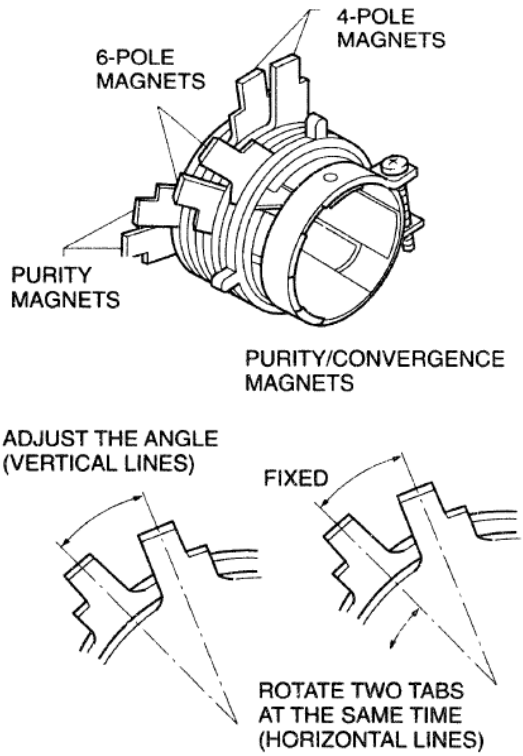

Figure 4.

■ SCREEN-CORNER CONVERGENCE

When the misconvergence is still evident on corners even though the above adjustment is done, use the ferrite sheet (Part No. 23993622) to correct misconvergence.

1. Put ferrite sheets into the space under the yoke. Decide such position that misconvergence becomes minimum, watching picture screen. (See figure below.)
2. Remove cover paper of ferrite sheet to stick it in the place on the tube. Put adhesive tapes on ferrite sheets to fix.

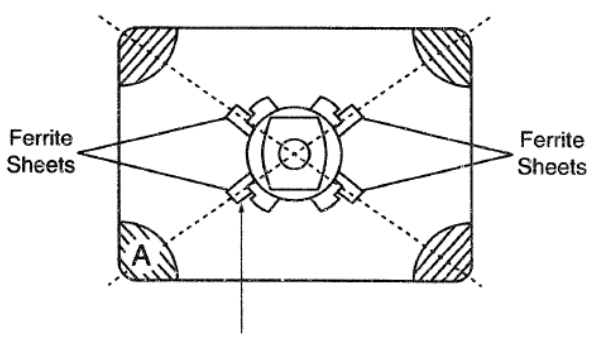

SERVICE MODE

1. ENTERING TO SERVICE MODE

1) Press MUTE button once on Remote Control.

2) Press MUTE button again to keep pressing.

3) While pressing the MUTE button, press MENU button on TV set.

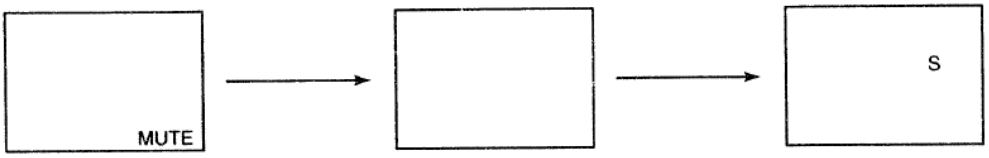

(Service mode display)

2. DISPLAYING THE ADJUSTMENT MENU

1) Press MENU button on TV.

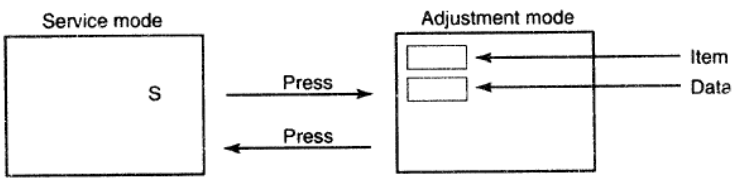

3. KEY FUNCTION IN THE SERVICE MODE

The following key entry during display of adjustment menu provides special functions.

A single horizontal line ON/OFF:	TV (ANT)/VIDEO button (on TV)
Test signal selection :	TV (ANT)/VIDEO button (on Remote)
Selection of the adjustment items :	Channel ▲/▼ (on TV or Remote)
Change of the data value :	Volume ▲/▼ (on TV or Remote)
Adjustment menu mode ON/OFF :	MENU button (on TV)
Initialization of the memory (QA02) :	RECALL+Channel (▲) button on TV
Initialization of the self diagnostic data:	RECALL+Channel (▼) button on TV

"RCUT" selection :	1 button
"GCUT" selection :	2 button
"BCUT" selection :	3 button
"CNTX" selection :	4 button
"COLC" selection :	5 button
"TNTC" selection :	6 button
Test audio signal ON/OFF (1kHz) :	8 button
Self diagnostic display ON/OFF :	9 button

4. SELECTING THE ADJUSTING ITEMS

1) Every pressing of CHANNEL ▲ button in the service mode changes the adjustment items in the order of table-2. (▼ button for reverse order)

Refer to table-2 for preset data of adjustment mode.
(See SETTING & ADJUSTING DATA on page 17.)

5. ADJUSTING THE DATA

1) Pressing of VOLUME ▲ or ▼ button will change the value of data in the range from 00H to FFH. The variable range depends on the adjusting item.

6. EXIT FROM SERVICE MODE

1) Pressing POWER button to turn off the TV once.

■ INITIALIZATION OF MEMORY DATA OF QA02

After replacing QA02, the following initialization is required.

1. Enter the service mode, then select any register item.
2. Press and hold the RECALL button on the Remote, then press the CHANNEL ▲ button on the TV. The initialization of QA02 has been completed.
3. Check the picture carefully. If necessary, adjust any adjustment item above. Perform "Programming Channel Memory" on the owner's manual.

CAUTION: Never attempt to initialize the data unless QA02 has been replaced.

7. TEST SIGNAL SELECTION

1) Every pressing of TV/VIDEO button on the Remote Control in the service mode changes the built-in test patterns on screen in the following order.

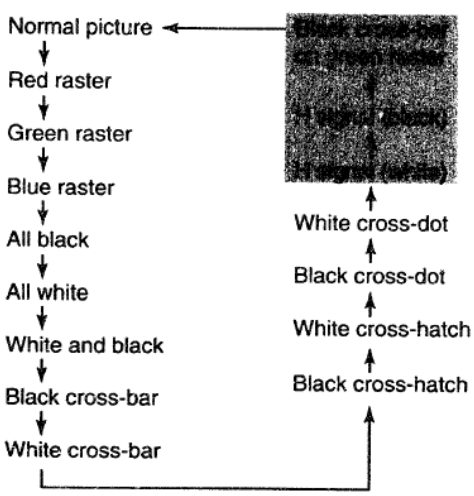

Signals	Picture
• Red raster • Green raster • Blue raster • All Black • All White	
• Black & White	
• Black cross-bar • White cross-bar	
• Black cross-hatch • White cross-hatch	
• Black cross-dot • White cross-dot	

2) Press "8" button while any built-in test pattern to on the screen to output the 1 kHz sound. Press the button again to cut off the sound.

Note: If the video cable is connected to the VIDEO1 INPUT jack, the built-in pattern signals are not displayed.

*The signals marked with ▩ are not usable to display in the test signal for some model.

8. SELF DIAGNOSTIC FUNCTION

1) Press "9" button on Remote Control during display of adjustment menu in the service mode.
   The diagnosis will begin to check if interface among IC's are executed properly.
2) During diagnosis, the following displays are shown.

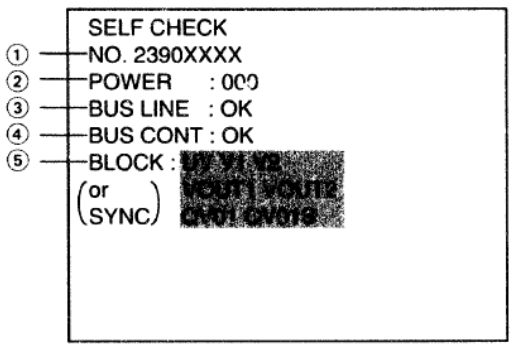

① Part number of microprocessor (QA01)
② Operation number of protection circuit (current limiter) . . . . "000" is normal.
③ BUS line check
- "OK" ..... Normal
- "SCL-GND" or "NG" ..... SCL-GND short circuit
- "SDA-GND" or "NG" ..... SDA-GND short circuit
- "SCL-SDA" or "NG" ..... SCL-SDA short circuit

④ BUS line ACK (acknowledge) check
- "OK" ..... Normal
- Display of Location Number . . . . NG
  (Display example)
  "QA02 NG", "H001 NG", "Q501 NG", etc.
  Note: The indication of failure place is only one place though failure places are plural. When repair of a failure place finishes, the next failure place is indicated. (The order of priority of indication is left side.)

⑤ Sync. signal check
- Green display ..... Normal
- Cyan display ..... No check
- Red display ..... NG

UV ..... TV mode
V1 ..... VIDEO 1 mode
V2 ..... VIDEO 2 mode

* The items marked with are not usable to display in the SELF DIAGNOSTIC FUNCTION for some model.

DESIGN MODE

1. ENTERING TO DESIGN MODE

1) Select the Service mode. 2) While pressing RECALL button on Remote and press MENU button on TV. 3) Press MENU button on TV.

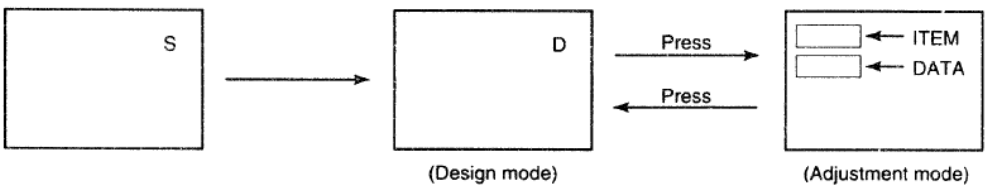

When QA02 is initialized, items "OPT0" and "OPT1" of DESIGN MODE are set to the data of the representative model of this chassis family.
Therefore, because ON-SCREEN specification remains in the state of the representative of model. This model is required to reset the data of items "OPT0" and "OPT1".

2. SELECTING THE ADJUSTING ITEMS

Every pressing of CHANNEL ▼ button in the design mode changes the adjustment items in the order of table-3.
(▲ button for reverse order)

Refer to table-3 for data of design mode.
(See SETTING & ADJUSTING DATA on page 17.)

3. ADJUSTING THE DATA

Pressing of VOLUME ▲ or ▼ button will change the value of data.

ELECTRICAL ADJUSTMENTS

ITEM	ADJUSTMENT PROCEDURE
FOCUS VR ADJ	1. Enter the service mode, then select any register item. 2. Press the TV/VIDEO button on the Remote until the black cross-bar pattern appears on the screen. 3. Adjust the FOCUS control (on T461) for well defined scanning lines on the picture screen.
SUB-BRIGHTNESS (BRTC)	1. Constrict the picture height until the vertical retrace line appears adjusting the HEIGHT control on the MAIN board. 2. Adjust the CONTRAST to the minimum and BRIGHTNESS to the center. 3. Enter the service mode, then select "**BRTC**" register. 4. Adjust the data value so the belt of vertical retrace line just disappear. 5. Adjust the CONTRAST for the desired contrast. 6. Adjust the HEIGHT control. 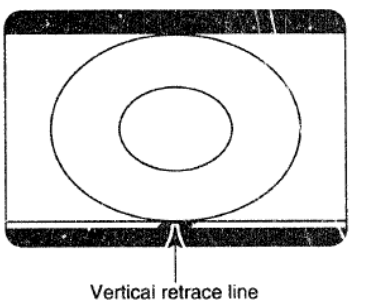 Vertical retrace line
SUB-COLOR (COLC) SUB-TINT (TNTC)	1. Receive color-bar signal from color-bar generator. 2. Press the RESET button. 3. Connect oscilloscope to base of Q906 on CRT-D board. 4. Enter the service mode, then select "**COLC**". 5. Adjust the SUB-COLOR by pressing the VOLUME ▲ or ▼ button to achieve about $1V_{0\text{-}p}$ of blue bar. 6. Select "**TNTC**" register. 7. Adjust the data value to obtain the blue bar to magenta bar ratio of 3:2 as shown. 8. Select "**COLC**" register. 9. Adjust the data value to achieve $1.8_{0\text{-}p}$ of blue bar on scope. 10. Check the picture with off-air signal. 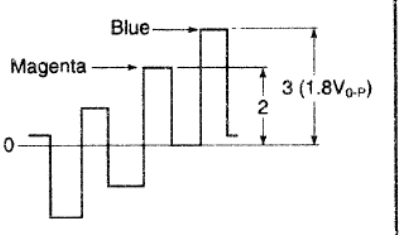
WIDTH (WID)	1. Call up the adjustment mode display, then select the item **WID**. 2. Press the VOLUME ▲ or ▼ button to get the picture so the left and right edges of raster begins to lack. 3. Press the VOLUME ▲ or ▼ button to advance the data by 7 steps. Note : Check the horizontal picture position is correct.

ITEM	ADJUSTMENT PROCEDURE
E-W PARABOLA (DPC)	1. Call up the adjustment mode display, then select the item **DPC**. 2. Press the TV/VIDEO button on Remote until the cross-hatch pattern appears on the screen. 3. Press the VOLUME ▲ or ▼ button to make vertical lines straight as shown below. 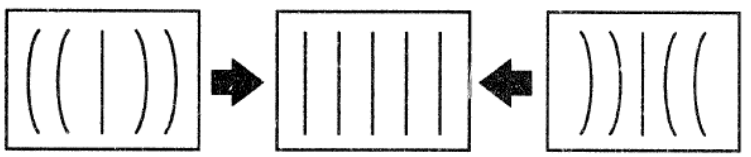
HORIZONTAL POSITION (HPOS) VERTICAL POSITION (VPOS)	1. Call up the adjustment mode display, then select the item **HPOS** or **VPOS**. 2. Press the TV/VIDEO button on Remote until the white cross-bar or black cross-bar pattern appears on the screen. 3. Adjust the HORIZONTAL and VERTICAL position alternately by pressing the VOLUME ▲ or ▼ button for proper picture position. 4. Check the picture with off-air signal. 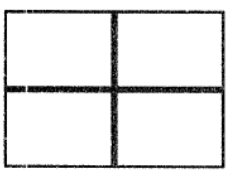
HEIGHT (HIT)	1. Call up the adjustment mode display, then select the item **HIT**. 2. Press the VOLUME ▲ or ▼ button to get the picture so the top of raster begins to lack. 3. Press the VOLUME ▲ button to advance the data by 8 steps. Note : Check the vertical picture position is correct.
WHITE BALANCE (RCUT) (GCUT) (BCUT) (GDRV) (BDRV)	1. Adjust the CONTRAST control to the center, and BRIGHTNESS control to the maximum. 2. Call up the adjustment mode display, and press the TV/VIDEO button on Remote until the white and black pattern appears on the screen. 3. Adjust the follcwing item with the CHANNEL ▲/▼ and VOLUME ▲/▼ buttons. RCUT ⟶ Data : 40H GCUT ⟶ Data : 40H BCUT ⟶ Data : 40H GDRV ⟶ Data : 40H BDRV ⟶ Data : 40H 4. Press the TV/VIDEO button on TV to display a single horizontal line on the screen. 5. Turn the SCREEN control (FBT) fully counterclockwise and gradually rotate clockwise until the first horizontal line appears slightly on the screen. 6. Press the TV/VIDEO button to display the normal picture. 7. Adjust the remaining two "?CUT" items (CHANNEL ▲/▼ → TV/VIDEO → VOLUME ▲/▼ in order) to obtain the slightly lighted horizontal line in the same levels of three (red, green, blue) colors. The line should be white if the adjustments are proper. 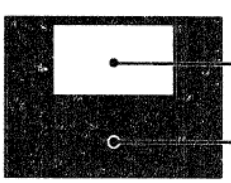 Bright area Adjust "GDRV" or "BDRV" to be white. Dark area Fine adjust "RCUT", "GCUT" or "BCUT" to be black.

MTS ADJUSTMENT (FOR N5ES/N7S CHASSIS)

No.	ITEM	INPUT SIGNAL	ADJUSTMENT PROCEDURE
1	ATTENUATOR (ATT)	• 1kHz 30% mod. → ANT terminal	1. Connect rms meter to pin 12 of H002. 2. Display item **ATT** on screen. 3. Change data by VOLUME ▲/▼ buttons so that output at pin 12 of H002 becomes value as close as 142mVrms.
2	STEREO VCO (STVC)	• No signal	1. Display item **STVC**, and connect pin 9 of H002 to ground. 2. Connect frequency counter to pin 12 of H002. 3. Change data by VOLUME ▲/▼ buttons so that the reading of counter becomes value as close as 4fH (62.936kHz).
3	SAP VCO (SAVC)	• 78.670kHz 147mVrms → pin 9 of H002 • Monaural signal → ANT	1. Display item **SAVC**. 2. Change data by VOLUME ▲/▼ buttons so that the data becomes in the center of range for STA7=0 and STA8=1. SAVC XXH STA7:0 STA8:1
4	STEREO FILTER (STRF)	• 9.4kHz 600mVrm → pin 9 of H002 Monaural signal → ANT	1. Display item **STRF** on screen. 2. Change data by VOLUME ▲/▼ buttons so that the data becomes in the center of range for STA3=1. STRF XXH STA3:1
5	SAP FILTER (SAPF)	• 88kHz 120mVrms → pin 9 of H002 • Monaural signal → ANT	1. Display item **SAPF**. 2. Change data by VOLUME ▲/▼ buttons so that the data becomes in the center of range for STA4=1. SAPF XXH STA4:1
6	STEREO SEPARATION (WBAN)	• STEREO 300Hz R-channel only → ANT	1. Select "STEREO" mode from the MTS function in the Audio menu. 2. Display item **WBAN** on screen. 3. Connect oscilloscope to pin 14 of H002. 4. Change data by VOLUME ▲/▼ buttons so that 300Hz element on scope becomes minimum.
	(SPEC)	• STEREO 3kHz R-channel only → ANT	5. Display item **SPEC** on screen. 6. Change data by VOLUME ▲/▼ buttons so that 3kHz element on scope becomes minimum.

MTS ADJUSTMENT (FOR N8ES CHASSIS)

No.	ITEM	INPUT SIGNAL	ADJUSTMENT PROCEDURE
1	ATTENUATOR (ATT)	• 1kHz 30% mod. → ANT terminal	1. Connect rms meter to pin 34 of QG01. 2. Display item **ATT** on screen. 3. Change data by VOLUME ▲/▼ buttons so that the reading of meter becomes value as close as 137mVrms.
2	STEREO VCO (STVC)	• No signal	1. Short circuit RG44 with a jumper wire. 2. Display item **STVC** on screen. 3. Connect frequency counter to pin 34 of QG01. 4. Change data by VOLUME ▲/▼ buttons so that the reading of counter becomes value as close as 15.73kHz.
3	STEREO FILTER (STRF)	• 15.734kHz 30mV(rms) 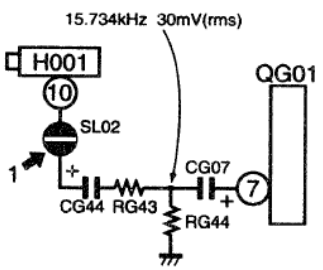	1. Unsolder the solder link SL02. 2. Display item **STRF** on screen. 3. Connect oscilloscope to pin 34 of QG01. 4. Change data by VOLUME ▲/▼ buttons to minimize AC output level on scope. 5. Resolder SL02.
4	STEREO SEPARATION (WBAN)	• STEREO 300Hz R-channel only → ANT	1. Display item **WBAN** on screen. 2. Connect oscilloscope to pin 35 of QG01. 3. Change data by VOLUME ▲/▼ buttons so that 300Hz element on scope becomes minimum.
	(SPEC)	• STEREO 3kHz R-channel only → ANT	4. Display item **SPEC** on screen. 5. Change data by VOLUME ▲/▼ buttons so that 3kHz element on scope becomes minimum.
5	SAP VCO (SAVC)	• No signal 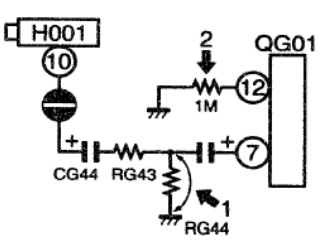	1. Shortcircuit RG44 with a short jumper. 2. Connect 1Mohm resistor between pin 12 of QG01 and ground. 3. Display item **SAVC** on screen. 4. Connect frequency counter to pin 34 of QG01. 5. Change data by VOLUME ▲/▼ buttons so that the reading of counter becomes value as close as 78.67kHz. 6. Remove the short jumper and 1M ohm resistor.

CIRCUIT CHECKS

HIGH VOLTAGE CHECK

CAUTION: There is no HIGH VOLTAGE ADJUSTMENT on this chassis. Checking should be done following the steps below.

1. Connect an accurate high voltage meter to the second anode of the picture tube.
2. Turn on the receiver. Set the BRIGHTNESS and CONTRAST controls to minimum (zero beam current).
3. High voltage must be measured below Ⓑ kV.

   Refer to table-1 for high voltage Ⓑ.
   (See SETTING & ADJUSTING DATA on page 17.)
4. Vary the BRIGHTNESS control to both extremes to be sure the high voltage does not exceed the limit under any conditions.

FS CIRCUIT CHECK

The Fail Safe (FS) circuit check is indispensable for the final check in servicing. Checking should be done following the steps below.

1. Turn the receiver on and press the RESET button.
2. Temporarily short TP-Ⓡ and TP-Ⓧ with a jumper wire. Raster and sound will disappear.
3. The receiver must remain in this state even after removing the jumper wire. This is the evidence that the FS circuit is functioning properly.
4. To obtain a picture again, temporarily turn the receiver off and allow the FS circuit more than 5 seconds to reset. Then turn the power switch on to produce a normal picture.

Troubleshooting Guide for Fail Safe Circuit

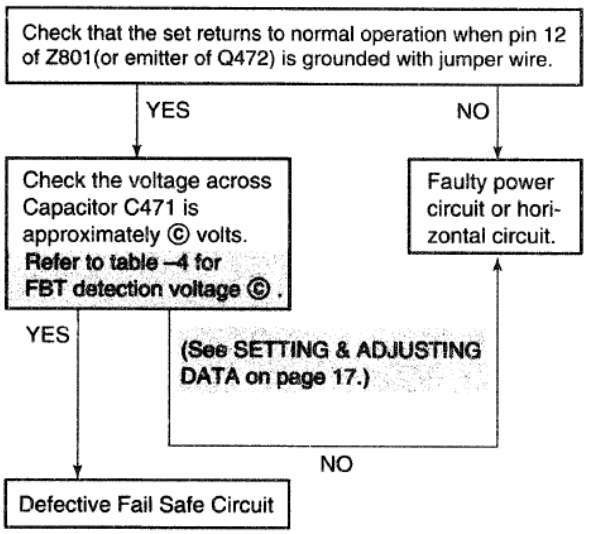
Check that the set returns to normal operation when pin 12 of Z801(or emitter of Q472) is grounded with jumper wire.
YES
NO
Check the voltage across Capacitor C471 is approximately Ⓒ volts.
Refer to table –4 for FBT detection voltage Ⓒ.
Faulty power circuit or horizontal circuit.
YES
(See SETTING & ADJUSTING DATA on page 17.)
NO
Defective Fail Safe Circuit

CHAPTER 2 SPECIFIC INFORMATIONS

SETTING & ADJUSTING DATA

【 SAFETY INSTRUCTIONS 】

		27"
HIGH VOLTAGE AT ZERO BEAM:	Ⓐ	28.1kV
MAX HIGH VOLTAGE:	Ⓑ	29.5 kV

Table-1

【 SERVICE MODE 】

ADJUSTING ITEMS AND DATA IN THE SERVICE MODE:

Item	Name of adjustment	Preset	Data
RCUT	R CUTOFF	40H	←
GCUT	G CUTOFF	40H	←
BCUT	B CUTOFF	40H	←
GDRV	G DRIVE	40H	←
BDRV	B DRIVE	40H	←
SCNT	SUB-CONTRAST	08H	←
BRTC	SUB-BRIGHT	40H	←
COLC	SUB-COLOR	40H	←
TNTC	SUB-TINT	40H	←
SAVC	SAP VCO	20H	←
ATT	ATTENUATOR	20H	←
SAPF	–	88H	←
STVC	STEREO VCO	20H	←
STRF	STEREO FILTER	20H	←
SPEC	SPECTRAL	20H	←
WBAN	STEREO SEPARATION	20H	←

Item	Name of adjustment	Preset	Data
HPOS	HORIZ. POSITION	15H	16H
VPOS	VERT. POSITION	03H	←
HIT	HEIGHT	20H	←
LIN	V-LINEARITY	07H	←
VSC	V-S CORRECTION	05H	←
WID	PICTURE WIDTH	1CH	1EH
DPC	E-W PARABOLA (DPC)	0FH	35H
CNR	E-W CORNER	08H	09H
TRAP	TRAPEZIUM	0AH	08H
PCOL	PIP COLOR	91H	←
PHUE	PIP TINT	09H	←

Table-2

【 DESIGN MODE 】

ADJUSTING ITEMS AND DATA IN THE DESIGN MODE:

Item	Name of adjustment		Data		Remarks
		Preset Data	CE27H15	CF27H50	
OPT0	OPTION 0	00H	00H	00H	
OPT1	OPTION 1	82H	02H	02H	

Table-3

【 CIRCUIT CHECKS 】

FBT DETECTION VOLTAGE	©	23.4V

Table-4

Location of Controls (Representative model CE27H15)

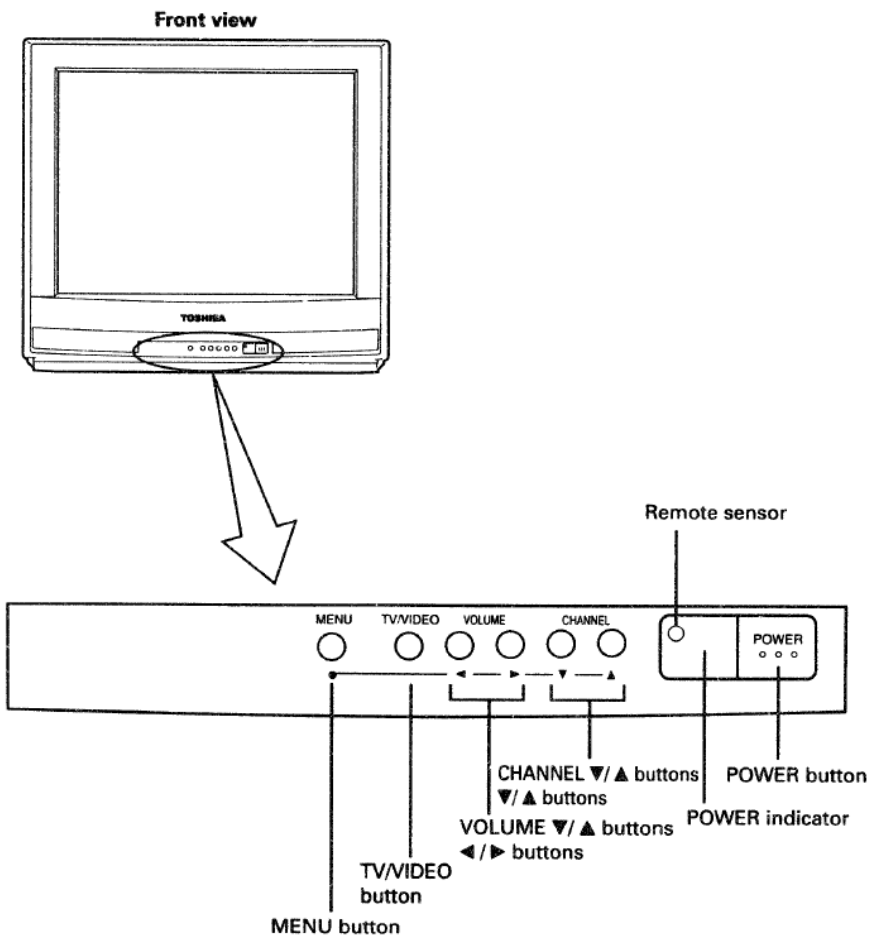

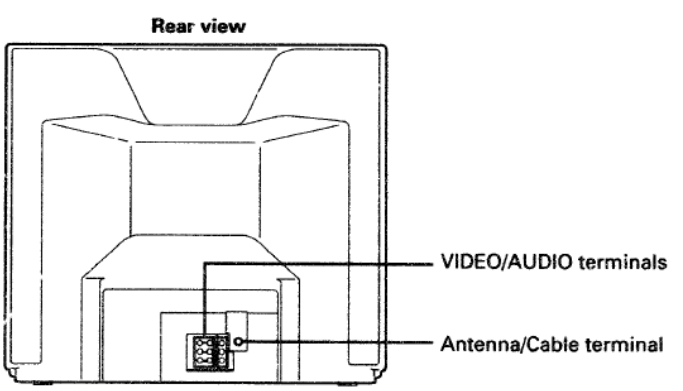

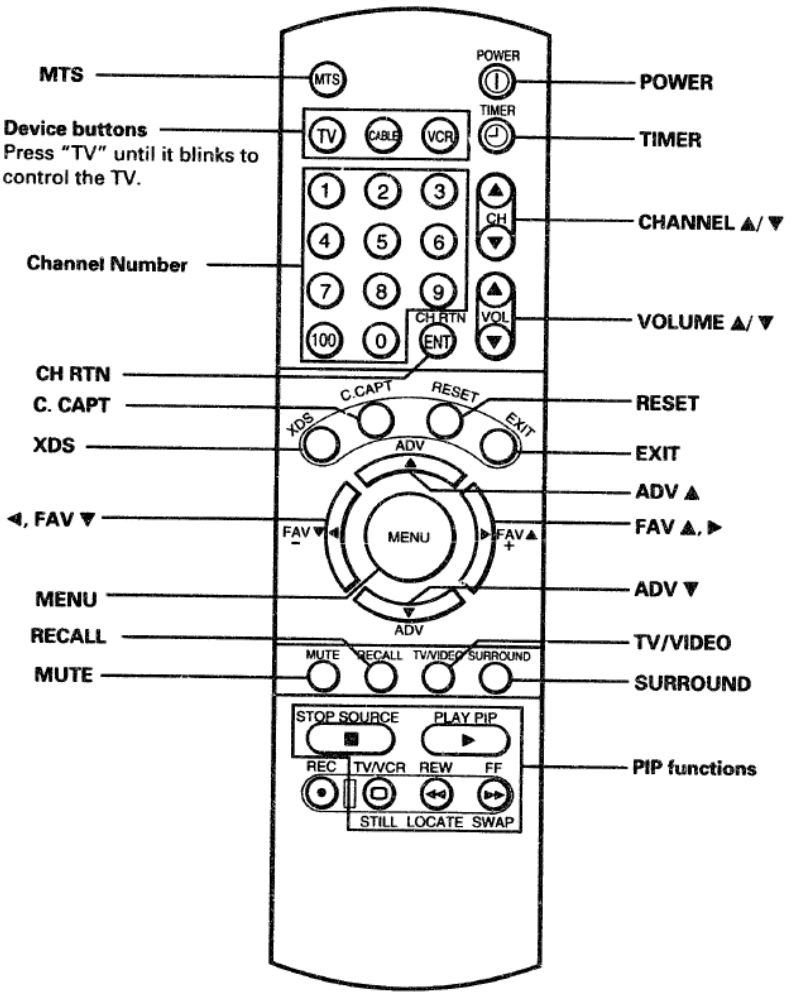
MTS
Device buttons
Press "TV" until it blinks to control the TV.
Channel Number
CH RTN
C. CAPT
XDS
◄, FAV ▼
MENU
RECALL
MUTE
POWER
TIMER
CHANNEL ▲/ ▼
VOLUME ▲/ ▼
RESET
EXIT
ADV ▲
FAV ▲, ►
ADV ▼
TV/VIDEO
SURROUND
PIP functions
POWER
MTS
TV
CABLE
VCR
TIMER
CH
VOL
CH RTN
ENT
C.CAPT
RESET
XDS
EXIT
ADV
FAV▼
MENU
FAV▲
MUTE
RECALL
TV/VIDEO
SURROUND
STOP SOURCE
PLAY PIP
REC
TV/VCR
REW
FF
STILL
LOCATE
SWAP

PROGRAMMING CHANNEL MEMORY

The channel memory is a list of TV channel numbers your TV will stop on when you press the CHANNEL ▲ or ▼ button. **First, use the TV/CABLE and CH PROGRAM functions to preset all active channels in your area.** If necessary, arrange the preset channels with the ADD/ERASE functions so that you can tune into only desired channels.

TV/CABLE function

1 Press **POWER** to turn on the TV.

2 Press **MENU** repeatedly until the Setup menu is displayed on the screen.

3 Press ▼ or ▲ repeatedly until "TV/CABLE" is displayed in purple.

4 Press ◄ or ► until the mode that corresponds to your TV signal system is displayed in purple.
TV: TV broadcasts signals.
(VHF channels 2 through 13 and UHF channels 14 through 69)
CABLE: Cable TV signals.
(Cable channels 1 through 125)

CH PROGRAM function

1 Press **MENU** repeatedly until the Setup menu is displayed on the screen.

2 Press ▲ or ▼ repeatedly until "CH PROGRAM" is displayed in purple.

3 Press ◄ or ► to start channel programming.
The TV will automatically cycle through all the TV or CABLE channels depending on the mode selected, and store active channels in the channel memory.

4 When channel programming is complete, you will see the message on the screen.

5 Press **CHANNEL** ▲ or ▼ to make sure the channel programming has been done properly.

ADD/ERASE function

After performing the CH PROGRAM function, you can add or erase specific channels.

1 Select the channel you want to erase using the **CHANNEL** ▲ or ▼ button, or select the channel you want to add using the **Channel Number** buttons.

2 Press **MENU** repeatedly until the Setup menu is displayed on the screen.

3 Press ▼ or ▲ repeatedly until "ADD/ERASE" is displayed in purple.

4 Press ◄ or ► :
To erase the channel
Press the button until "ERASE" is displayed in purple indicating that the channel has been erased from the memory.

To add the channel
Press the button until "ADD" is displayed in purple indicating that the channel has been memorized.

5 Repeat steps 1 to 4 for other channels.

You have now completed the channel programming.

CABLE channel reference chart

Number on this TV	1	5	6	14	15	16 ····· 34	35	36	37	38 ····· 60	61	62	63	64	65	66
Corresponding CABLE channel	A-8	5(A-7)	6(A-6)	A	B	C ····· U	V	W	AA	BB ····· XX	YY	ZZ	AAA	BBB	65	66
Number on this TV	**67**	**68**	**69 ····· 92**			**93**	**94**	**95**	**96**	**97**	**98**	**99**	**100**	**101**	**102 ····· 123**	**124**	**125**
Corresponding CABLE channel	67	68	69 ····· 92			93	94	A-5	A-4	A-3	A-2	A-1	100	101	102 ····· 123	124	125

The above chart is typical of many cable system channel allocations. If in doubt, consult your cable company.

CIRCUIT BLOCK DIAGRAM

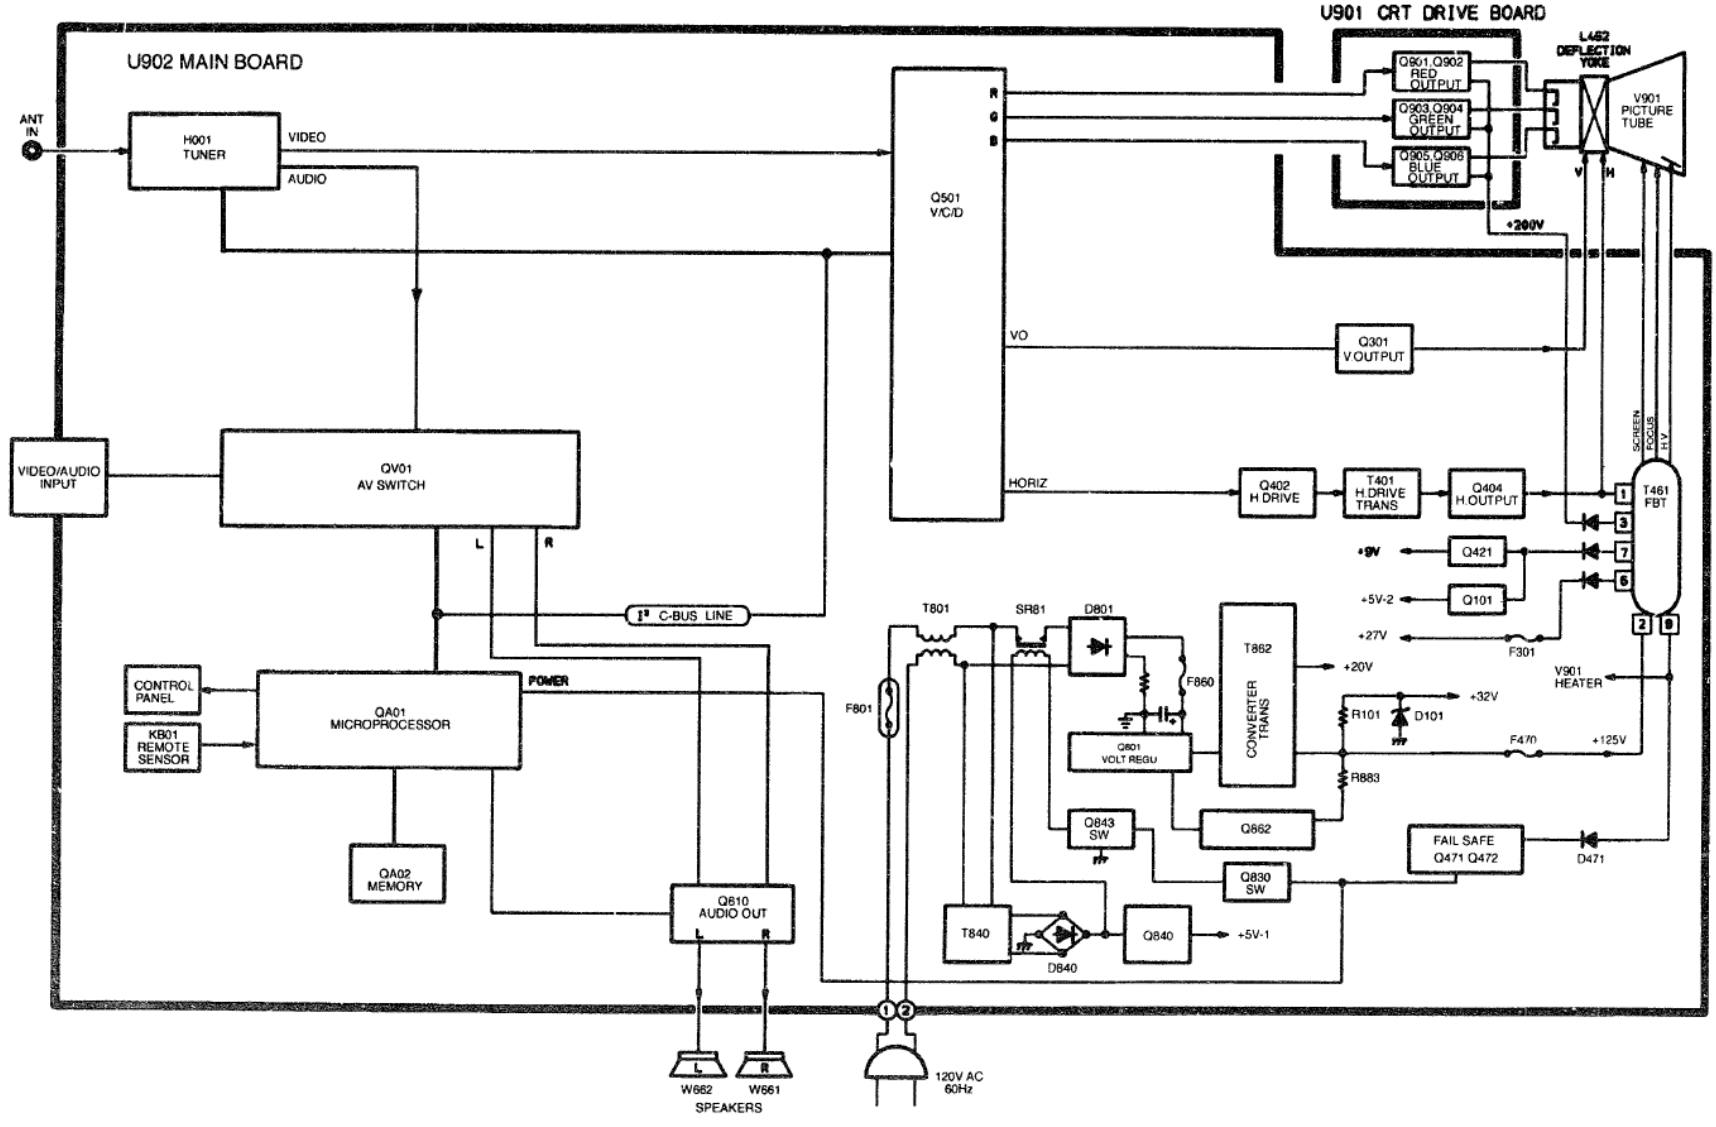

CHASSIS AND CABINET REPLACEMENT PARTS LIST

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 3 OF THIS MANUAL.

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE. Do not degrade the safety of the receiver through improper servicing.

NOTICE:

- *The part number must be used when ordering parts, in order to assist in processing, be sure to include the Model number and Description.*
- *The PC board assembly with ✶ mark is no longer available after the end of the production.*

Model : CE27H15/CF27H50

Capacitors	CD	:	Ceramic Disk	PF	:	Plastic Film	EL	: Electrolytic
Resistors	CF	:	Carbon Film	CC	:	Carbon Composition	MF	: Metal Film
	OMF	:	Oxide Metal Film	VR	:	Variable Resistor	FR	: Fusible Resistor

(All CD and PF capacitors are ±5%, 50V and all resistors, ±5%, 1/6W unless otherwise noted.)

Location No.	Part No.	Description
CAPACITORS		
C102	24763221	EL, 220μF, ±20%, 16V
C103	24232103	CD, 0.01μF, +80%, −20%
C105	24212102	CD, 1000pF, ±10%
C106	24797479	EL, 4.7μF, ±20%, 50V
C201	24206108	EL, 0.1μF, 50V
C204	24797010	EL, 1μF, ±20%, 50V
C205	24794100	EL, 10μF, ±20%, 16V
C216	24797100	EL, 10μF, ±20%, 50V
C245	24206108	EL, 0.1μF, 50V
C246	24476103	CD, 0.01μF, ±30%, 16V
C305	24617912	EL, 2.2μF, ±10%, 50V
C306	24073058	EL, 2200μF, ±20%, 16V
C307	24693223	PF, 0.022μF, 100V
C308	24668221	EL, 220μF, ±20%, 35V
C309	24591102	PF, 1000pF
C310	24796102	EL, 1000μF, ±20%, 35V
C311	24214821	CD, 820pF, ±10%, 500V
C313	24082057	PF, 0.22μF, 100V
C314	24539104	PF, 0.1μF
C315	24539104	PF, 0.1μF
C317	24214471	CD, 470pF, ±10%, 500V
C319	24212102	CD, 1000pF, ±10%
C320	24668101	EL, 100μF, ±20%, 35V
C322	24617915	EL, 1μF, ±10%, 50V
C323	24538474	PF, 0.47μF
C325	24538683	PF, 0.068μF
C326	24539104	PF, 0.1μF
C337	24797229	EL, 2.2μF, ±20%, 50V
C360	24793101	EL, 100μF, ±20%, 10V
C402	24567334	PF, 0.33μF
C403	24591103	PF, 0.01μF
C404	24797010	EL, 1μF, ±20%, 50V
C405	24591823	PF, 0.082μF
C406	24591393	PF, 0.039μF
C410	24232103	CD, 0.01μF, +80%, −20%
C413	24214821	CD, 820pF, ±10%, 500V
C415	24567273	PF, 0.027μF
C416	24678010	EL, 1μF, ±20%, 200V
C417	24214391	CD, 390pF, ±10%, 500V
C421	24794101	EL, 100μF, ±20%, 16V

Location No.	Part No.	Description
C430	24232103	CD, 0.01μF, +80%, −20%
C431	24794101	EL, 100μF, ±20%, 16V
⚠C440	24082928	PF, 7000pF, ±3%, 1500V
⚠C442	24082922	PF, 0.47μF, 315V
⚠C444	24082956	PF, 7200pF, ±3%, 1500V
C445	24828563	PF, 0.056μF, 200V
C446	24679100	EL, 10μF, ±20%, 250V
C448	24640908	EL, 33μF, ±20%, 160V
C449	24667102	EL, 1000μF, ±20%, 25V
C457	24591222	PF, 2200pF
C463	24212152	CD, 1500pF, ±10%
C464	24640872	EL, 10μF, ±20%, 100V
C471	24797479	EL, 4.7μF, ±20%, 50V
C474	24794100	EL, 10μF, ±20%, 16V
C480	24747220	EL, 22μF, ±20%, 50V
C481	24538474	PF, 0.47μF
C498	24436270	CD, 27pF
C499	24212102	CD, 1000pF, ±10%
C504	24591222	PF, 2200pF
C505	24353120	CD, 12pF
C508	24797478	EL, 0.47μF, ±20%, 50V
C510	24763101	EL, 100μF, ±20%, 16V
C511	24232103	CD, 0.01μF, +80%, −20%
C512	24206228	EL, 0.22μF, 50V
C582	24232103	CD, 0.01μF, +80%, −20%
C583	24764471	EL, 470μF, ±20%, 25V
C612	24794470	EL, 47μF, ±20%, 16V
C661	24212102	CD, 1000pF, ±10%
C662	24212102	CD, 1000pF, ±10%
C663	24794100	EL, 10μF, ±20%, 16V
C671	24667470	EL, 47μF, ±20%, 25V
C672	24667470	EL, 47μF, ±20%, 25V
C673	24669229	EL, 2.2μF, ±20%, 50V
C676	24539104	PF, 0.1μF
C677	24539104	PF, 0.1μF
C678	24669229	EL, 2.2μF, ±20%, 50V
C679	24667470	EL, 47μF, ±20%, 25V
C681	24667102	EL, 1000μF, ±20%, 25V
C682	24668101	EL, 100μF, ±20%, 35V
C683	24667102	EL, 1000μF, ±20%, 25V
C801	24095670	PF, 0.22μF, ±20%, AC125V

Location No.	Part No.	Description
C802	24095852	PF, 0.082μF, ±20%, AC125V
C805	24092300	CD, 0.01μF, +80%, –20%, AC250V
C806	24092300	CD, 0.01μF, +80%, –20%, AC250V
C810	24086061	EL, 470μF, ±20%, 200V
C811	24092585	CD, 4700pF, ±20%, AC250V
C812	24092585	CD, 4700pF, ±20%, AC250V
C813	24092585	CD, 4700pF, ±20%, AC250V
C819	24766478	EL, 0.47μF, ±20%, 50V
C832	24794470	EL, 47μF, ±20%, 16V
C840	24795221	EL, 220μF, ±20%, 25V
C842	24792101	EL, 100μF, ±20%, 6.3V
C843	24539104	PF, 0.1μF
C860	24214103	CD, 0.01μF, ±10%, 500V
C861	24212101	CD, 100pF, ±10%
C863	24539104	PF, 0.1μF
C865	24092347	CD, 1500pF, ±10%, 2kV
C866	24669010	EL, 1μF, ±20%, 50V
C867	24591822	PF, 8200pF
C868	24667470	EL, 47μF, ±20%, 25V
C869	24678229	EL, 2.2μF, ±20%, 200V
C870	24082869	PF, 0.18μF, 400V
C871	24092347	CD, 1500pF, ±10%, 2kV
C872	24435221	CD, 220pF, 500V
C873	24539224	PF, 0.22μF
C874	24435221	CD, 220pF, 500V
C876	24539104	PF, 0.1μF
C884	24640018	EL, 220μF, ±20%, 160V
C885	24214471	CD, 470pF, ±10%, 500V
C886	24214471	CD, 470pF, ±10%, 500V
C889	24796222	EL, 2200μF, ±20%, 35V
C891	24082229	PF, 0.1μF, ±10%, 250V
C893	24092338	CD, 270pF, ±10%, 2kV
C894	24092338	CD, 270pF, ±10%, 2kV
C898	24539224	PF, 0.22μF
C902	24092345	CD, 1000pF, ±10%, 2kV
C904	24436471	CD, 470pF
C905	24436471	CD, 470pF
C907	24436471	CD, 470pF
C909	24679220	EL, 22μF, ±20%, 250V
C910	24797478	EL, 0.47μF, ±20%, 50V
C911	24794100	EL, 10μF, ±20%, 16V
C912	24763471	EL, 470μF, ±20%, 16V
C913	24794100	EL, 10μF, ±20%, 16V
C914	24232103	CD, 0.01μF, +80%, –20%
C915	24212102	CD, 1000pF, ±10%
C920	24214101	CD, 100pF, ±10%, 500V
C921	24232103	CD, 0.01μF, +80%, –20%
C922	24232103	CD, 0.01μF, +80%, –20%
CA12	24474101	CD, 100pF, ±10%
CA33	24232103	CD, 0.01μF, +80%, –20%
CA37	24474101	CD, 100pF, ±10%
CA38	24474101	CD, 100pF, ±10%
CA42	24794100	EL, 10μF, ±20%, 16V
CA43	24232103	CD, 0.01μF, +80%, –20%
CA44	24232103	CD, 0.01μF, +80%, –20%
CA68	24794100	EL, 10μF, ±20%, 16V
CA69	24232103	CD, 0.01μF, +80%, –20%
CB01	24797470	EL, 47μF, ±20%, 50V
CB20	24212101	CD, 100pF, ±10%
CB40	24591473	PF, 0.047μF
CB60	24085944	EL, 2.2μF, ±20%, 50V, Non-Polar

Location No.	Part No.	Description
CB61	24591102	PF, 1000pF
CB62	24436561	CD, 560pF
CB63	24591122	PF, 1200pF
CG02	24203220	EL, 22μF, ±20%, 16V
CG03	24539104	PF, 0.1μF
CG05	24797010	EL, 1μF, ±20%, 50V
CG06	24797479	EL, 4.7μF, ±20%, 50V
CG07	24206229	EL, 2.2μF, 50V
CG08	24591473	PF, 0.047μF
CG09	24797478	EL, 0.47μF, ±20%, 50V
CG10	24539104	PF, 0.1μF
CG12	24206108	EL, 0.1μF, 50V
CG14	24797010	EL, 1μF, ±20%, 50V
CG16	24704106	Tantalum, 10μF, ±20%, 16V
CG17	24797010	EL, 1μF, ±20%, 50V
CG18	24797010	EL, 1μF, ±20%, 50V
CG19	24797479	EL, 4.7μF, ±20%, 50V
CG20	24797010	EL, 1μF, ±20%, 50V
CG25	24797479	EL, 4.7μF, ±20%, 50V
CG26	24797479	EL, 4.7μF, ±20%, 50V
CG27	24591223	PF, 0.022μF
CG28	24797229	EL, 2.2μF, ±20%, 50V
CG29	24591102	PF, 1000pF
CG30	24206108	EL, 0.1μF, 50V
CG31	24797229	EL, 2.2μF, ±20%, 50V
CG32	24591102	PF, 1000pF
CG33	24206108	EL, 0.1μF, 50V
CG36	24206229	EL, 2.2μF, 50V
CG37	24206229	EL, 2.2μF, 50V
CG38	24206229	EL, 2.2μF, 50V
CG39	24206229	EL, 2.2μF, 50V
CG42	24206010	EL, 1μF, 50V
CG44	24203100	EL, 10μF, ±20%, 16V
CG45	24203101	EL, 100μF, ±20%, 16V
CM51	24539104	PF, 0.1μF
CM55	24436101	CD, 100pF
CM58	24539104	PF, 0.1μF
CS70	24794220	EL, 22μF, ±20%, 16V
CS71	24794220	EL, 22μF, ±20%, 16V
CV01	24206108	EL, 0.1μF, 50V
CV03	24206108	EL, 0.1μF, 50V(CF27H50)
CV05	24232103	CD, 0.01μF, +80%, –20% (CF27H50)
CV13	24206108	EL, 0.1μF, 50V
CV23	24203100	EL, 10μF, ±20%, 16V
CV29	24232103	CD, 0.01μF, +80%, –20%
CV31	24206108	EL, 0.1μF, 50V
CV36	24794220	EL, 22μF, ±20%, 16V
CV38	24763221	EL, 220μF, ±20%, 16V
CV39	24232103	CD, 0.01μF, +80%, –20%
CV41	24591223	PF, 0.022μF
CV60	24763471	EL, 470μF, ±20%, 16V
CV61	24763471	EL, 470μF, ±20%, 16V
CY01	24474151	CD, 150pF, ±10%
CY10	24781680	Chip, 68pF, SL
CY11	24203330	EL, 33μF, ±20%, 16V
CY12	24792221	EL, 220μF, ±20%, 6.3V
CY13	24092293	Chip, 0.1μF, +80%,–20%, 25V
CY14	24814103	Chip, 0.01μF, +80%,–20%
CY19	24092293	Chip, 0.1μF, +80%,–20%, 25V
CY20	24591333	PF, 0.033μF
CY21	24590154	PF, 0.15μF
CY22	24590104	PF, 0.1μF
CY23	24203100	EL, 10μF, ±20%, 16V

Location No.	Part No.	Description
CY24	24774120	Chip, 12pF, CH
CY25	24814103	Chip, 0.01μF, +80%,–20%
CY26	24814103	Chip, 0.01μF, +80%,–20%
CY27	24092293	Chip, 0.1μF, +80%,–20%, 25V
CY29	24092293	Chip, 0.1μF, +80%,–20%, 25V
CY30	24774120	Chip, 12pF, CH
CY31	24814103	Chip, 0.01μF, +80%,–20%
CY32	24792221	EL, 220μF, ±20%, 6.3V
CY33	24092293	Chip, 0.1μF, +80%,–20%, 25V
CY34	24814103	Chip, 0.01μF, +80%,–20%
CY35	24590104	PF, 0.1μF
CY36	24590104	PF, 0.1μF
CY37	24092293	Chip, 0.1μF, +80%,–20%, 25V
CY38	24792221	EL, 220μF, ±20%, 6.3V
CY39	24203100	EL, 10μF, ±20%, 16V
CY40	24092293	Chip, 0.1μF, +80%,–20%, 25V
CY41	24092293	Chip, 0.1μF, +80%,–20%, 25V
CY42	24781151	Chip, 150pF, SL
CY43	24814103	Chip, 0.01μF, +80%,–20%
CY44	24203100	EL, 10μF, ±20%, 16V
CY49	24781680	Chip, 68pF, SL
CY50	24092293	Chip, 0.1μF, +80%,–20%, 25V
CY52	24814103	Chip, 0.01μF, +80%,–20%
CY53	24590154	PF, 0.15μF
CY54	24206339	EL, 3.3μF, 50V
CY62	24781101	Chip, 100pF, SL
CY63	24781101	Chip, 100pF, SL
CY64	24092293	Chip, 0.1μF, +80%,–20%, 25V
CY65	24781560	Chip, 56pF, SL
CY66	24781151	Chip, 150pF, SL
CY67	24085981	EL, 10μF, ±20%, 16V, Non-Polar
CY68	24781101	Chip, 100pF, SL
CY69	24781100	Chip, 10pF, ±0.5%, SL
CY70	24085958	EL, 1.0μF, ±20%, 50V, Non-Polar
CY71	24781121	Chip, 120pF, SL
CY72	24781560	Chip, 56pF, SL
CY73	24792221	EL, 220μF, ±20%, 6.3V
CY74	24092293	Chip, 0.1μF, +80%,–20%, 25V
CY76	24781101	Chip, 100pF, SL
CY77	24781330	Chip, 33pF, SL
CY78	24201330	EL, 33μF, 6.3V
CY79	24814103	Chip, 0.01μF, +80%,–20%
CY80	24092293	Chip, 0.1μF, +80%,–20%, 25V
CZ01	24797478	EL, 0.47μF, ±20%, 50V
CZ02	24763101	EL, 100μF, ±20%, 16V
CZ03	24092398	CD, 0.1μF, +80%,–20%
CZ04	24476103	CD, 0.01μF, ±30%, 16V
CZ05	24476103	CD, 0.01μF, ±30%, 16V
CZ07	24763101	EL, 100μF, ±20%, 16V
CZ08	24092398	CD, 0.1μF, +80%,–20%
CZ09	24474101	CD, 100pF, ±10%
CZ11	24591103	PF, 0.01μF
CZ12	24474181	CD, 180pF, ±10%
CZ13	24476103	CD, 0.01μF, ±30%, 16V
CZ14	24476103	CD, 0.01μF, ±30%, 16V
CZ15	24473470	CD, 47pF
CZ16	24473470	CD, 47pF
CZ17	24092398	CD, 0.1μF, +80%,–20%
RESISTORS		
R101	24382273	OMF, 27k ohm, 1W
R201	24366101	CF, 100 ohm

Location No.	Part No.	Description
R203	24366474	CF, 470k ohm
R207	24366101	CF, 100 ohm
R208	24366101	CF, 100 ohm
R209	24366101	CF, 100 ohm
R216	24366223	CF, 22k ohm
R223	24366471	CF, 470 ohm
R228	24366563	CF, 56k ohm
R238	24366183	CF, 18k ohm
R239	24366274	CF, 270k ohm
R240	24366562	CF, 5600 ohm
R245	24366104	CF, 100k ohm
R261	24366182	CF, 1800 ohm
R262	24366222	CF, 2200 ohm
R263	24366182	CF, 1800 ohm
R264	24366222	CF, 2200 ohm
R265	24366182	CF, 1800 ohm
R266	24366222	CF, 2200 ohm
R270	24366272	CF, 2700 ohm
R271	24366101	CF, 100 ohm
R272	24366272	CF, 2700 ohm
R301	24366102	CF, 1k ohm
R303	24321109	MF, 1 ohm, 1/2W
R304	24366473	CF, 47k ohm
R305	24322828	OMF, 0.82 ohm, 1W
R306	24366243	CF, 24k ohm
R307	24366564	CF, 560k ohm
R308	24383391	OMF, 390 ohm, 2W
R309	24553221	OMF, 220 ohm, 1W
R313	24366163	CF, 16k ohm
R314	24366105	CF, 1M ohm
R315	24366824	CF, 820k ohm
R316	24366154	CF, 150k ohm
R317	24366102	CF, 1k ohm
R327	24339479	MF, 4.7 ohm, 2W
R328	24366244	CF, 240k ohm
R336	24383221	OMF, 220 ohm, 2W
R360	24366104	CF, 100k ohm
R361	24366104	CF, 100k ohm
R362	24366104	CF, 100k ohm
R368	24545479	FR, 4.7 ohm, 1/4W
R369	24366391	CF, 390 ohm
R401	24366391	CF, 390 ohm
R403	24366622	CF, 6200 ohm
R404	24366104	CF, 100k ohm
R405	24382682	OMF, 6800 ohm, 1W
R407	24366103	CF, 10k ohm
R408	24366472	CF, 4700 ohm
R410	24366181	CF, 180 ohm
R411	24366561	CF, 560 ohm
R415	24553272	OMF, 2700 ohm, 1W
R416	24510682	Cement, 6800 ohm, 5W
R418	24383181	OMF, 180 ohm, 2W
R421	24366123	CF, 12k ohm
R422	24366822	CF, 8200 ohm
R424	24546339	FR, 3.3 ohm, 1/2W
R425	24366561	CF, 560 ohm
R430	24366102	CF, 1k ohm
R431	24366103	CF, 10k ohm
R432	24366202	CF, 2k ohm
R434	24366472	CF, 4700 ohm
R442	24532102	FR, 1k ohm, 1W
R448	24338478	MF, 0.47 ohm, 1W
R456	24366103	CF, 10k ohm
R457	24366104	CF, 100k ohm

Location No.	Part No.	Description
R472	24381270	OMF, 27 ohm, 1/2W
R473	24366473	CF, 47k ohm
⚠R475	24366181	CF, 180 ohm
R476	24366823	CF, 82k ohm
R477	24366273	CF, 27k ohm
⚠R478	24327133	MF, 13k ohm, ±1%, 1/4W
R481	24366333	CF, 33k ohm
⚠R482	24327562	MF, 5600 ohm, ±1%, 1/4W
R485	24338568	MF, 0.56 ohm, 1W
R486	24552820	OMF, 82 ohm, 1/2W
R487	24552301	OMF, 300 ohm, 1/2W
R488	24327183	MF, 18k ohm, ±1%, 1/4W
R489	24327183	MF, 18k ohm, ±1%, 1/4W
R490	24366102	CF, 1k ohm
R498	24510279	Cement, 2.7 ohm, 5W
R501	24366333	CF, 33k ohm
R502	24366101	CF, 100 ohm
R503	24366101	CF, 100 ohm
R511	24366471	CF, 470 ohm
R612	24366103	CF, 10k ohm
R613	24366222	CF, 2200 ohm
R614	24366102	CF, 1k ohm
R661	24366822	CF, 8200 ohm
R662	24366822	CF, 8200 ohm
R663	24366392	CF, 3900 ohm
R664	24366392	CF, 3900 ohm
R667	24366223	CF, 22k ohm
R668	24366103	CF, 10k ohm
R669	24366103	CF, 10k ohm
R676	24366229	CF, 2.2 ohm
R677	24366229	CF, 2.2 ohm
R808	24000862	PTC Thermistor, 7 ohm, ±20%, 140V
R810	24007873	Cement, 1.1 ohm, 15W
R816	24366471	CF, 470 ohm
R818	24366561	CF, 560 ohm
R819	24366102	CF, 1k ohm
R830	24322759	OMF, 7.5 ohm, 1W
R831	24366561	CF, 560 ohm
R861	24382223	OMF, 22k ohm, 1W
R862	24552330	OMF, 33 ohm, 1/2W
R864	24552102	OMF, 1k ohm, 1/2W
R866	24552470	OMF, 47 ohm, 1/2W
R867	24366273	CF, 27k ohm
R868	24552560	OMF, 56 ohm, 1/2W
R870	24381271	OMF, 270 ohm, 1/2W
R871	24381151	OMF, 150 ohm, 1/2W
R872	24382563	OMF, 56k ohm, 1W
R883	24552682	OMF, 6800 ohm, 1/2W
R884	24366102	CF, 1k ohm
R889	24546398	FR, 0.39 ohm, 1/2W
R891	24366102	CF, 1k ohm
R898	24002000	CC, 3.9M ohm, ±10%, 1/2W
R901	24552102	OMF, 1k ohm, 1/2W
R902	24552102	OMF, 1k ohm, 1/2W
R903	24552102	OMF, 1k ohm, 1/2W
R904	24366103	CF, 10k ohm
R905	24366101	CF, 100 ohm
R911	24366150	CF, 15 ohm
R914	24366561	CF, 560 ohm
R915	24366221	CF, 220 ohm
R917	24366102	CF, 1k ohm
R918	24366820	CF, 82 ohm
R920	24000945	FR, 1.8 ohm, 2W

Location No.	Part No.	Description
R921	24366561	CF, 560 ohm
R922	24366221	CF, 220 ohm
R924	24366820	CF, 82 ohm
R925	24366102	CF, 1k ohm
R928	24366561	CF, 560 ohm
R929	24366221	CF, 220 ohm
R930	24366820	CF, 82 ohm
R932	24366272	CF, 2700 ohm
R934	24366391	CF, 390 ohm
R935	24366821	CF, 820 ohm
R936	24366750	CF, 75 ohm
R937	24366102	CF, 1k ohm
R939	24366101	CF, 100 ohm
R942	24366562	CF, 5600 ohm
R943	24366562	CF, 5600 ohm
R944	24366562	CF, 5600 ohm
R960	24383153	OMF, 15k ohm, 2W
R961	24383153	OMF, 15k ohm, 2W
R962	24383153	OMF, 15k ohm, 2W
R963	24366223	CF, 22k ohm
R964	24366392	CF, 3900 ohm
R977	24366122	CF, 1200 ohm
R980	24366471	CF, 470 ohm
R981	24366821	CF, 820 ohm
R982	24366103	CF, 10k ohm
R983	24366222	CF, 2200 ohm
R984	24367152	CF, 1500 ohm, ±2%
R985	24367471	CF, 470 ohm, ±2%
R986	24367681	CF, 680 ohm, ±2%
R987	24367681	CF, 680 ohm, ±2%
R988	24367472	CF, 4700 ohm, ±2%
R989	24367472	CF, 4700 ohm, ±2%
R990	24366222	CF, 2200 ohm
R991	24367681	CF, 680 ohm, ±2%
RA03	24366102	CF, 1k ohm
RA04	24366102	CF, 1k ohm
RA06	24366223	CF, 22k ohm
RA07	24366102	CF, 1k ohm
RA08	24366102	CF, 1k ohm
RA09	24366102	CF, 1k ohm
RA10	24366102	CF, 1k ohm
RA12	24366103	CF, 10k ohm
RA13	24366102	CF, 1k ohm
RA14	24366102	CF, 1k ohm
RA16	24366102	CF, 1k ohm
RA17	24366102	CF, 1k ohm
RA18	24366102	CF, 1k ohm
RA22	24366331	CF, 330 ohm
RA23	24366331	CF, 330 ohm
RA24	24366331	CF, 330 ohm
RA25	24366331	CF, 330 ohm
RA26	24366102	CF, 1k ohm
RA27	24366102	CF, 1k ohm
RA33	24366103	CF, 10k ohm
RA34	24366102	CF, 1k ohm
RA35	24366102	CF, 1k ohm
RA36	24366102	CF, 1k ohm
RA37	24366331	CF, 330 ohm
RA38	24366331	CF, 330 ohm
RA40	24366101	CF, 100 ohm
RA41	24366101	CF, 100 ohm
RA61	24366103	CF, 10k ohm
RA62	24366103	CF, 10k ohm
RA67	24366472	CF, 4700 ohm

Location No.	Part No.	Description
RA68	24366472	CF, 4700 ohm
RA70	24366333	CF, 33k ohm
RA71	24366683	CF, 68k ohm
RA72	24366223	CF, 22k ohm
RA73	24366103	CF, 10k ohm
RB01	24366271	CF, 270 ohm
RB03	24366101	CF, 100 ohm
RB09	24366470	CF, 47 ohm
RB11	24366103	CF, 10k ohm
RB21	24366472	CF, 4700 ohm
RB22	24366122	CF, 1200 ohm
RB23	24366222	CF, 2200 ohm
RB27	24366103	CF, 10k ohm
RB28	24366104	CF, 100k ohm
RB29	24366102	CF, 1k ohm
RB30	24366103	CF, 10k ohm
RB40	24366103	CF, 10k ohm
RB41	24366182	CF, 1800 ohm
RB42	24366102	CF, 1k ohm
RB43	24366103	CF, 10k ohm
RB44	24366103	CF, 10k ohm
RB45	24366181	CF, 180 ohm
RB46	24366101	CF, 100 ohm
RB60	24366101	CF, 100 ohm
RB61	24366244	CF, 240k ohm
RB62	24366133	CF, 13k ohm
RB63	24366392	CF, 3900 ohm
RB64	24366103	CF, 10k ohm
RB65	24366103	CF, 10k ohm
RB66	24366221	CF, 220 ohm
RB67	24366102	CF, 1k ohm
RG05	24366102	CF, 1k ohm
RG08	24366564	CF, 560k ohm
RG09	24366563	CF, 56k ohm
RG14	24366302	CF, 3k ohm
RG15	24327153	MF, 15k ohm, ±1%, 1/4W
RG16	24366162	CF, 1600 ohm
RG17	24366512	CF, 5100 ohm
RG22	24366101	CF, 100 ohm
RG23	24366101	CF, 100 ohm
RG36	24366472	CF, 4700 ohm
RG37	24366472	CF, 4700 ohm
RG41	24366103	CF, 10k ohm
RG43	24366472	CF, 4700 ohm
RG44	24366272	CF, 2700 ohm
RG45	24545479	FR, 4.7 ohm, 1/4W
RG46	24552681	OMF, 680 ohm, 1/2W
RM02	24366332	CF, 3300 ohm
RM56	24366332	CF, 3300 ohm
RR93	24366472	CF, 4700 ohm
RS21	24366472	CF, 4700 ohm
RS24	24366472	CF, 4700 ohm
RS60	24366101	CF, 100 ohm
RS61	24366222	CF, 2200 ohm
RS62	24366101	CF, 100 ohm
RS63	24366222	CF, 2200 ohm
RS64	24366102	CF, 1k ohm
RS65	24366102	CF, 1k ohm
RS66	24366102	CF, 1k ohm
RS68	24366223	CF, 22k ohm
RS69	24366223	CF, 22k ohm
RS70	24366104	CF, 100k ohm
RS71	24366104	CF, 100k ohm
RV01	24366750	CF, 75 ohm

Location No.	Part No.	Description
RV02	24366750	CF, 75 ohm (CF27H50)
RV03	24366750	CF, 75 ohm
RV07	24366103	CF, 10k ohm
RV08	24366102	CF, 1k ohm (CF27H50)
RV09	24366223	CF, 22k ohm
RV10	24366153	CF, 15k ohm
RV19	24366101	CF, 100 ohm
RV20	24366101	CF, 100 ohm
RV60	24552101	OMF, 100 ohm, 1/2W
RV61	24366101	CF, 100 ohm
RV62	24366750	CF, 75 ohm
RV63	24366221	CF, 220 ohm
RY10	24366181	CF, 180 ohm
RY12	24872333	Chip, 33k ohm, 1/16W
RY13	24872152	Chip, 1500 ohm, 1/16W
RY14	24366102	CF, 1k ohm
RY15	24366273	CF, 27k ohm
RY16	24872102	Chip, 1k ohm, 1/16W
RY17	24872102	Chip, 1k ohm, 1/16W
RY18	24872102	Chip, 1k ohm, 1/16W
RY21	24872301	Chip, 300 ohm, 1/16W
RY22	24872104	Chip, 100k ohm, 1/16W
RY23	24872474	Chip, 470k ohm, 1/16W
RY24	24872153	Chip, 15k ohm, 1/16W
RY26	24872152	Chip, 1500 ohm, 1/16W
RY27	24872223	Chip, 22k ohm, 1/16W
RY28	24872333	Chip, 33k ohm, 1/16W
RY29	24872333	Chip, 33k ohm, 1/16W
RY30	24872104	Chip, 100k ohm, 1/16W
RY31	24872223	Chip, 22k ohm, 1/16W
RY34	24872102	Chip, 1k ohm, 1/16W
RY36	24872471	Chip, 470 ohm, 1/16W
RY38	24872361	Chip, 360 ohm, 1/16W
RY41	24872471	Chip, 470 ohm, 1/16W
RY45	24872101	Chip, 100 ohm, 1/16W
RY48	24872223	Chip, 22k ohm, 1/16W
RY61	24872102	Chip, 1k ohm, 1/16W
RY62	24872152	Chip, 1500 ohm, 1/16W
RY63	24872102	Chip, 1k ohm, 1/16W
RY65	24872152	Chip, 1500 ohm, 1/16W
RY68	24872102	Chip, 1k ohm, 1/16W
RY69	24872122	Chip, 1200 ohm, 1/16W
RY70	24872272	Chip, 2700 ohm, 1/16W
RY71	24872102	Chip, 1k ohm, 1/16W
RY72	24872102	Chip, 1k ohm, 1/16W
RY75	24872472	Chip, 4700 ohm, 1/16W
RY77	24872102	Chip, 1k ohm, 1/16W
RY78	24872102	Chip, 1k ohm, 1/16W
RY80	24872473	Chip, 47k ohm, 1/16W
RY81	24872124	Chip, 120k ohm, 1/16W
RY82	24872333	Chip, 33k ohm, 1/16W
RY85	24872471	Chip, 470 ohm, 1/16W
RY86	24872101	Chip, 100 ohm, 1/16W
RY87	24872101	Chip, 100 ohm, 1/16W
RY88	24872101	Chip, 100 ohm, 1/16W
RY89	24872102	Chip, 1k ohm, 1/16W
RY90	24872102	Chip, 1k ohm, 1/16W
RY91	24872100	Chip, 10 ohm, 1/16W
RY92	24872102	Chip, 1k ohm, 1/16W
RY93	24872102	Chip, 1k ohm, 1/16W
RY94	24872101	Chip, 100 ohm, 1/16W
RY95	24872101	Chip, 100 ohm, 1/16W
RY96	24872105	Chip, 1M ohm, 1/16W
RY97	24872102	Chip, 1k ohm, 1/16W

Location No.	Part No.	Description
RY98	24872223	Chip, 22k ohm, 1/16W
RY99	24872683	Chip, 68k ohm, 1/16W
RZ01	24366101	CF, 100 ohm
RZ02	24366101	CF, 100 ohm
RZ03	24366102	CF, 1k ohm
RZ04	24366102	CF, 1k ohm
RZ05	24366821	CF, 820 ohm
RZ07	24366751	CF, 750 ohm
RZ08	24366102	CF, 1k ohm
RZ09	24366102	CF, 1k ohm
COILS & TRANSFORMERS		
L101	23289220	Coil, Peaking, TRF4220AF
L301	23103880	Coil (Ferrite Bead), TEM2011Y
L400	23238714	Coil, Peaking, TRF4100AJ
⚠L441	23233072	Coil, Linearity, TLN2115G
L463	23103880	Coil (Ferrite Bead), TEM2011Y
L501	23289470	Coil, Peaking, TRF4470AF
L502	23289470	Coil, Peaking, TRF4470AF
L805	23248213	Coil, Choke, TLN3481AH
L806	23248213	Coil, Choke, TLN3481AH
L861	23103880	Coil (Ferrite Bead), TEM2011Y
L862	23103880	Coil (Ferrite Bead), TEM2011Y
L883	23103880	Coil (Ferrite Bead), TEM2011Y
L884	23103880	Coil (Ferrite Bead), TEM2011Y
L885	23248073	Coil, Choke, TLN3299D
L886	23103880	Coil (Ferrite Bead), TEM2011Y
L888	23103880	Coil (Ferrite Bead), TEM2011Y
L901	23200789	Coil, Degaussing, TSB2205A
L902	23289221	Coil, Peaking, TRF4221AF
L903	23289221	Coil, Peaking, TRF4221AF
L904	23289221	Coil, Peaking, TRF4221AF
L910	23237991	Coil, Peaking, TRF4479AC
LA01	23289100	Coil, Peaking, TRF4100AF
LB01	23262280	Coil, IF, TRF1196D
LV01	23289100	Coil, Peaking, TRF4100AF
LY10	23238705	Coil, Peaking, TRF4560AJ
LY11	23289229	Coil, Peaking, TRF42R2AF
LY13	23289229	Coil, Peaking, TRF42R2AF
LY14	23238506	Coil, Peaking, TRF4229AJ
LY16	23103829	Chip (Ferrite Bead), TEM2122M
LY17	23289229	Coil, Peaking, TRF42R2AF
LY20	23289229	Coil, Peaking, TRF42R2AF
LY21	23238509	Coil, Peaking, TRF4151AJ
LY22	23238709	Coil, Peaking, TRF4270AJ
LY23	23289229	Coil, Peaking, TRF42R2AF
LZ01	23238708	Coil, Peaking, TRF4330AJ
LZ02	23103880	Coil (Ferrite Bead), TEM2011Y
LZ03	23103880	Coil (Ferrite Bead), TEM2011Y
LZ04	23103880	Coil (Ferrite Bead), TEM2011Y
LZ05	23289100	Coil, Peaking, TRF4100AF
T401	23224367	Transformer, Horiz. Drive, TLN1058AH
⚠T461	23236483	Transformer, Flyback, TFB4129AD
T801	23211708	Line Filter, TRF3223AK
T840	23213513	Transformer, Power, TPW1459AZ
T862	23217379	Transformer, Converter, TPW3321AG
SEMICONDUCTORS		
Q202	23114528	Transistor, 2SC1740S-Q

Location No.	Part No.	Description
Q203	23114528	Transistor, 2SC1740S-Q
Q204	A6002040	Transistor, RN1204
Q301	B0378560	IC, TA8427K
Q301B	72471082	Screw, BRDT2W3X10 SZN
Q361	23314444	Transistor, 2SC4721 P
Q402	A6330069	Transistor, 2SC2482 FA-1
Q403	23314444	Transistor, 2SC4721 P
Q404	A6871313	Transistor, 2SD1556(E)
Q404B	72471082	Screw, BRDT2W3X10 SZN
Q421	23314141	Transistor, 2SC3852
Q421B	23035308	Screw, BTB3X8 SZN
Q430	A6002040	Transistor, RN1204
Q471	A6534036	Transistor, 2SA1015-O
Q472	23114528	Transistor, 2SC1740S-Q
Q480	A6532853	Transistor, 2SA949-Y(C)
Q501	B0385957	IC, TA1252AN
Q610	B0376856	IC, TA8211AH
Q610B	70391356	Screw, BITTB3X10 SZN
Q611	A6342206	Transistor, 2SC2878-A(TE
Q612	23114530	Transistor, 2SA933S-Q
Q613	A6342206	Transistor, 2SC2878-A(TE
Q801	23906369	IC, STR-Z4214
Q801B	23476828	Bracket
Q817	23114528	Transistor, 2SC1740S-Q
Q818	A6012010	Transistor, RN2201
Q819	23114528	Transistor, 2SC1740S-Q
Q830	23314141	Transistor, 2SC3852
Q830B	23035308	Screw, BTB3X8 SZN
Q840	23318299	IC, L78MR05
Q843	A6002050	Transistor, RN1205
Q862	A8643135	Photo Coupler, TLP621(GRL)
⚠Q883	A6907777	IC, S1854 FA-4
Q901	A6368700	Transistor, 2SC4544
Q902	23114528	Transistor, 2SC1740S-Q
Q903	A6368700	Transistor, 2SC4544
Q904	23114528	Transistor, 2SC1740S-Q
Q905	A6368700	Transistor, 2SC4544
Q906	23114528	Transistor, 2SC1740S-Q
Q907	23114530	Transistor, 2SA933S-Q
Q908	A6321265	Transistor, 2SC2120-Y(TE)
Q910	23114528	Transistor, 2SC1740S-Q
Q911	23114528	Transistor, 2SC1740S-Q
Q912	23114530	Transistor, 2SA933S-Q
Q913	23114530	Transistor, 2SA933S-Q
Q914	23114528	Transistor, 2SC1740S-Q
Q960	23114528	Transistor, 2SC1740S-Q
QA01	23906516	IC, TMPA8700CMN-136
QA02	70129483	IC, AT24C0210PC
QB01	23114528	Transistor, 2SC1740S-Q
QB03	A6002050	Transistor, RN1205
QB21	23114528	Transistor, 2SC1740S-Q
QB22	A6734590	Transistor, 2SC752(G)TM-Y
QB30	23114528	Transistor, 2SC1740S-Q
QB40	23114528	Transistor, 2SC1740S-Q
QB60	23114530	Transistor, 2SA933S-Q
QB61	23114528	Transistor, 2SC1740S-Q
QB62	23114528	Transistor, 2SC1740S-Q
QB63	A6002060	Transistor, RN1206
QG01	23905591	IC, μPC1851CU
QG05	A6333346	Transistor, 2SC2655-Y(C)
QM53	23314360	Transistor, DTC143TN
QS60	23114528	Transistor, 2SC1740S-Q
QS61	23114528	Transistor, 2SC1740S-Q
QS62	A6012040	Transistor, RN2204

Location No.	Part No.	Description
QS63	A6342206	Transistor, 2SC2878-A(TE
QS64	A6342206	Transistor, 2SC2878-A(TE
QV01	23906364	IC, MM1313BD
QV60	23114528	Transistor, 2SC1740S-Q
QY02	23905945	IC, M65617SP-A
QY05	A6333346	Transistor, 2SC2655-Y(C)
QY11	A6541130	Transistor, 2SA1162-Y
QY12	A6361770	Transistor, 2SC3437-Y
QY13	A6734590	Transistor, 2SC752(G)TM-Y
QY14	A6335470	Transistor, 2SC2712-Y
QY15	A6335470	Transistor, 2SC2712-Y
QY16	A6335470	Transistor, 2SC2712-Y
QY17	A6541130	Transistor, 2SA1162-Y
QY18	A6335470	Transistor, 2SC2712-Y
QY20	A6335470	Transistor, 2SC2712-Y
QY21	A6335470	Transistor, 2SC2712-Y
QY23	A6541130	Transistor, 2SA1162-Y
QZ01	B0410867	IC, TC90A45P
QZ02	23114528	Transistor, 2SC1740S-Q
QZ03	23114528	Transistor, 2SC1740S-Q
QZ04	23114528	Transistor, 2SC1740S-Q
D101	23316411	Diode, 1SS184
D201	23118859	Diode, 1SS133
D221	23118859	Diode, 1SS133
D222	23118859	Diode, 1SS133
D301	23118095	Diode, ERB44-06
D302	23118094	Diode, EU2A
D308	23118822	Diode, ERB12-02
D309	23118822	Diode, ERB12-02
D313	23118859	Diode, 1SS133
D316	23316673	Diode, Zener, MTZJ5,6C
D406	A7978850	Diode, S5295G
D408	A7580658	Diode, 3JH41
D409	23316690	Diode, Zener, MTZJ10B
D411	23316684	Diode, Zener, MTZJ8.2B
D421	23316665	Diode, Zener, MTZJ4.7A
D422	23316672	Diode, Zener, MTZJ5.6B
D430	23316720	Diode, Zener, MTZJ12C
D441	23316687	Diode, Zener, MTZJ9.1B
D461	23316582	Diode, ERC20-06
D461B	70391356	Screw, BITTB3X10 SZN
D464	23316648	Diode, Zener, MTZJ2.2A
D471	A7568460	Diode, TVR-1B
⚠D472	23115774	Diode, Zener, RD6.2E(4)
D473	23118859	Diode, 1SS133
D480	23316757	Diode, Zener, MTZJ36A
D611	23118859	Diode, 1SS133
D612	23118859	Diode, 1SS133
D801	23316391	Diode, D3SB60, 4109
D830	23316673	Diode, Zener, MTZJ5,6C
D840	23316962	Diode, S1WBA20 4101
D845	23118859	Diode, 1SS133
D862	23118094	Diode, EU2A
D864	23118094	Diode, EU2A
D873	23316719	Diode, Zener, MTZJ12B
D875	23316719	Diode, Zener, MTZJ12B
D876	23316746	Diode, Zener, MTZJ27B
D881	23118859	Diode, 1SS133
⚠D882	23316721	Diode, Zener, MTZJ13A
D883	23357021	Diode, EL1
D884	23357021	Diode, EL1
D885	23118094	Diode, EU2A
D886	23118094	Diode, EU2A
D898	23316746	Diode, Zener, MTZJ27B

Location No.	Part No.	Description
D899	24000268	Varistor, ENC271D-14A
D901	23118859	Diode, 1SS133
D902	23118859	Diode, 1SS133
D903	23118859	Diode, 1SS133
D904	23118859	Diode, 1SS133
D905	23118859	Diode, 1SS133
D906	23118859	Diode, 1SS133
D911	A7568250	Diode, 1S1834
D960	23118859	Diode, 1SS133
D961	23118859	Diode, 1SS133
D962	23118859	Diode, 1SS133
D963	23118859	Diode, 1SS133
D964	23118859	Diode, 1SS133
D964	23118859	Diode, 1SS133
D964	23118859	Diode, 1SS133
DA42	23316672	Diode, Zener, MTZJ5.6B
DB03	23358522	LED, SIR-56SB3F
DB30	23118859	Diode, 1SS133
DB45	23118859	Diode, 1SS133
DE50	23358501	Diode (LED), SCL003URC5F
DG02	23316690	Diode, Zener, MTZJ10B
DV01	23316686	Diode, Zener, MTZJ9.1A
DV03	23316686	Diode, Zener, MTZJ9.1A (CF27H50)
DV05	23316686	Diode, Zener, MTZJ9.1A (CF27H50)
DV13	23316686	Diode, Zener, MTZJ9.1A
DY10	23316660	Diode, Zener, MTZJ3.9A
DY11	23316820	Diode, 1SS353
DY12	23316820	Diode, 1SS353
DY14	23316820	Diode, 1SS353
DY15	23316820	Diode, 1SS353

MISCELLANEOUS

B201	23470513	Frame (CF27H50)
B110	23162278	Holder, Back Terminal
F301	23144908	Fuse, 0.5A, 125V
F301A	23165433	Holder, Fuse
F470	23144785	Fuse, 1.25A, 125V
F470A	23165433	Holder, Fuse
F801	23144888	Fuse, 5.0A, 125V
F801A	23165433	Holder, Fuse
F860	23144511	Fuse, 4.0A, 125V
G217	24366393	CF, 39k ohm
G500	23289100	Coil, Peaking, TRF4100AF
G890	23103775	Coil (Ferrite Bead), TEM2014
G891	23103775	Coil (Ferrite Bead), TEM2014
G908	23289100	Coil, Peaking, TRF4100AF
G916	24366101	CF, 100 ohm
G945	24366101	CF, 100 ohm
G946	24366101	CF, 100 ohm
GR01	24366470	CF, 47 ohm
GR02	24366101	CF, 100 ohm
GR03	24366101	CF, 100 ohm
JY100	24000824	Chip, Jumper, 2125 type
JY101	24000824	Chip, Jumper, 2125 type
KB01	23905177	Remote Sensor, PIC-TB16
P801	23372065	Power Cord
P910	23164725	Plug, 2P
PV01	23365818	Jack, SVHS(CF27H50)
PV03	23365848	Jack, 9P
SA01	23145227	Switch, Push, 1C1P
SA02	23145227	Switch, Push, 1C1P
SA03	23145227	Switch, Push, 1C1P

Location No.	Part No.	Description
SA04	23145227	Switch, Push, 1C1P
SA05	23145227	Switch, Push, 1C1P
SA06	23145227	Switch, Push, 1C1P
SA07	23145227	Switch, Push, 1C1P
SR81	23146564	Relay, DC12V
V901A	23902068	Socket, CRT, 10P
W661	23351088	Speaker, SPK-1360, 60x120mm, 8 ohm
W662	23351088	Speaker, SPK-1360, 60x120mm, 8 ohm
X401	23153721	Ceramic Resonator, 503kHz, TCR1023
X501	23153961	Crystal, 3.58MHz
XA01	23153325	Ceramic Resonator, 8.00M, TCR1056
XY01	23153899	Crystal, 14.31818MHz
PC BOARD ASSEMBLIES		
* U901		CRT Drive Board, PB7809C
* U902		Main Board, PB8021A (CE27H15)
* U902		Main Board, PB8021B (CF27H50)
* UY01		PIP Board, PB7712
PICTURE TUBE		
⚠V901	23312649	Picture Tube, A68ADT28X04
TUNER		
H001	23321310	Tuner, EL933L2
ACCESSORIES		
K912	23306261	Remote Hand Unit, CT-9945 (CE27H15)
K912	23306266	Remote Hand Unit, CT-9951 (CF27H50)
AT03	23588207	Battery Cover
Y101	23563284	Owner's Manual, English, CE27H15
Y101	23563351	Owner's Manual, English, CF27H50
Y101F	23563285	Owner's Manual, French, CE27H15
Y101F	23563352	Owner's Manual, French, CF27H50

CABINET PARTS

Location No.	Part No.	Description
A201	23510422	Front Cover
A251	23450023	Filter, Remote
A252	23445171	Button, Control
A253	23445172	Button, Power
A256	23836492	Spring, Coil
A411	23427409	Back Cover
A701	23524502	Carton Box
A703	23935360	Packing, Top
A708	23935361	Packing, Bottom
A902	23998346	Label, Warning

THIS PAGE IS
INTENTIONALLY LEFT
BLANK.

MAIN BOARD PB8021A

BOTTOM (FOIL) SIDE

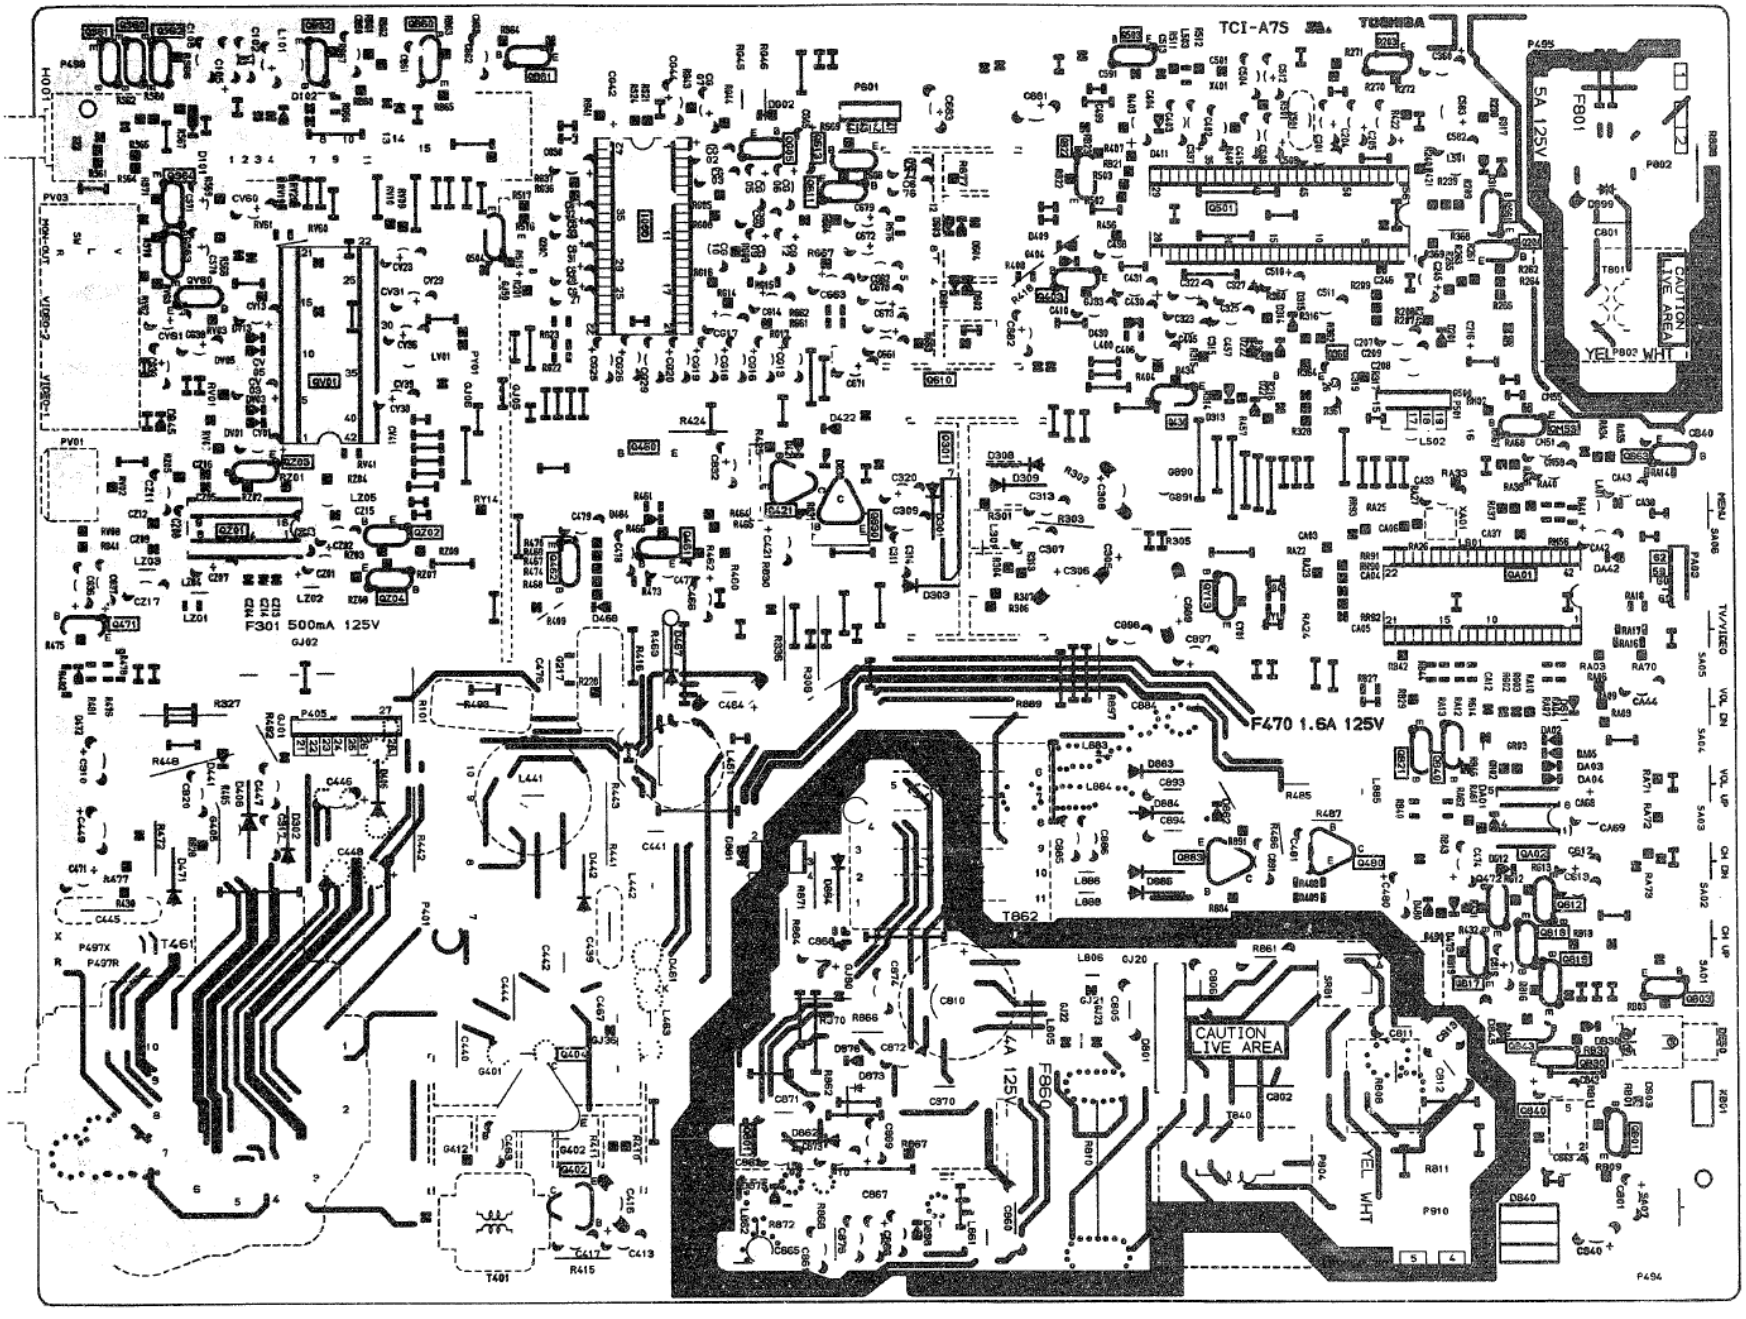

MAIN BOARD PB802

BOTTOM (FOIL) SIDE

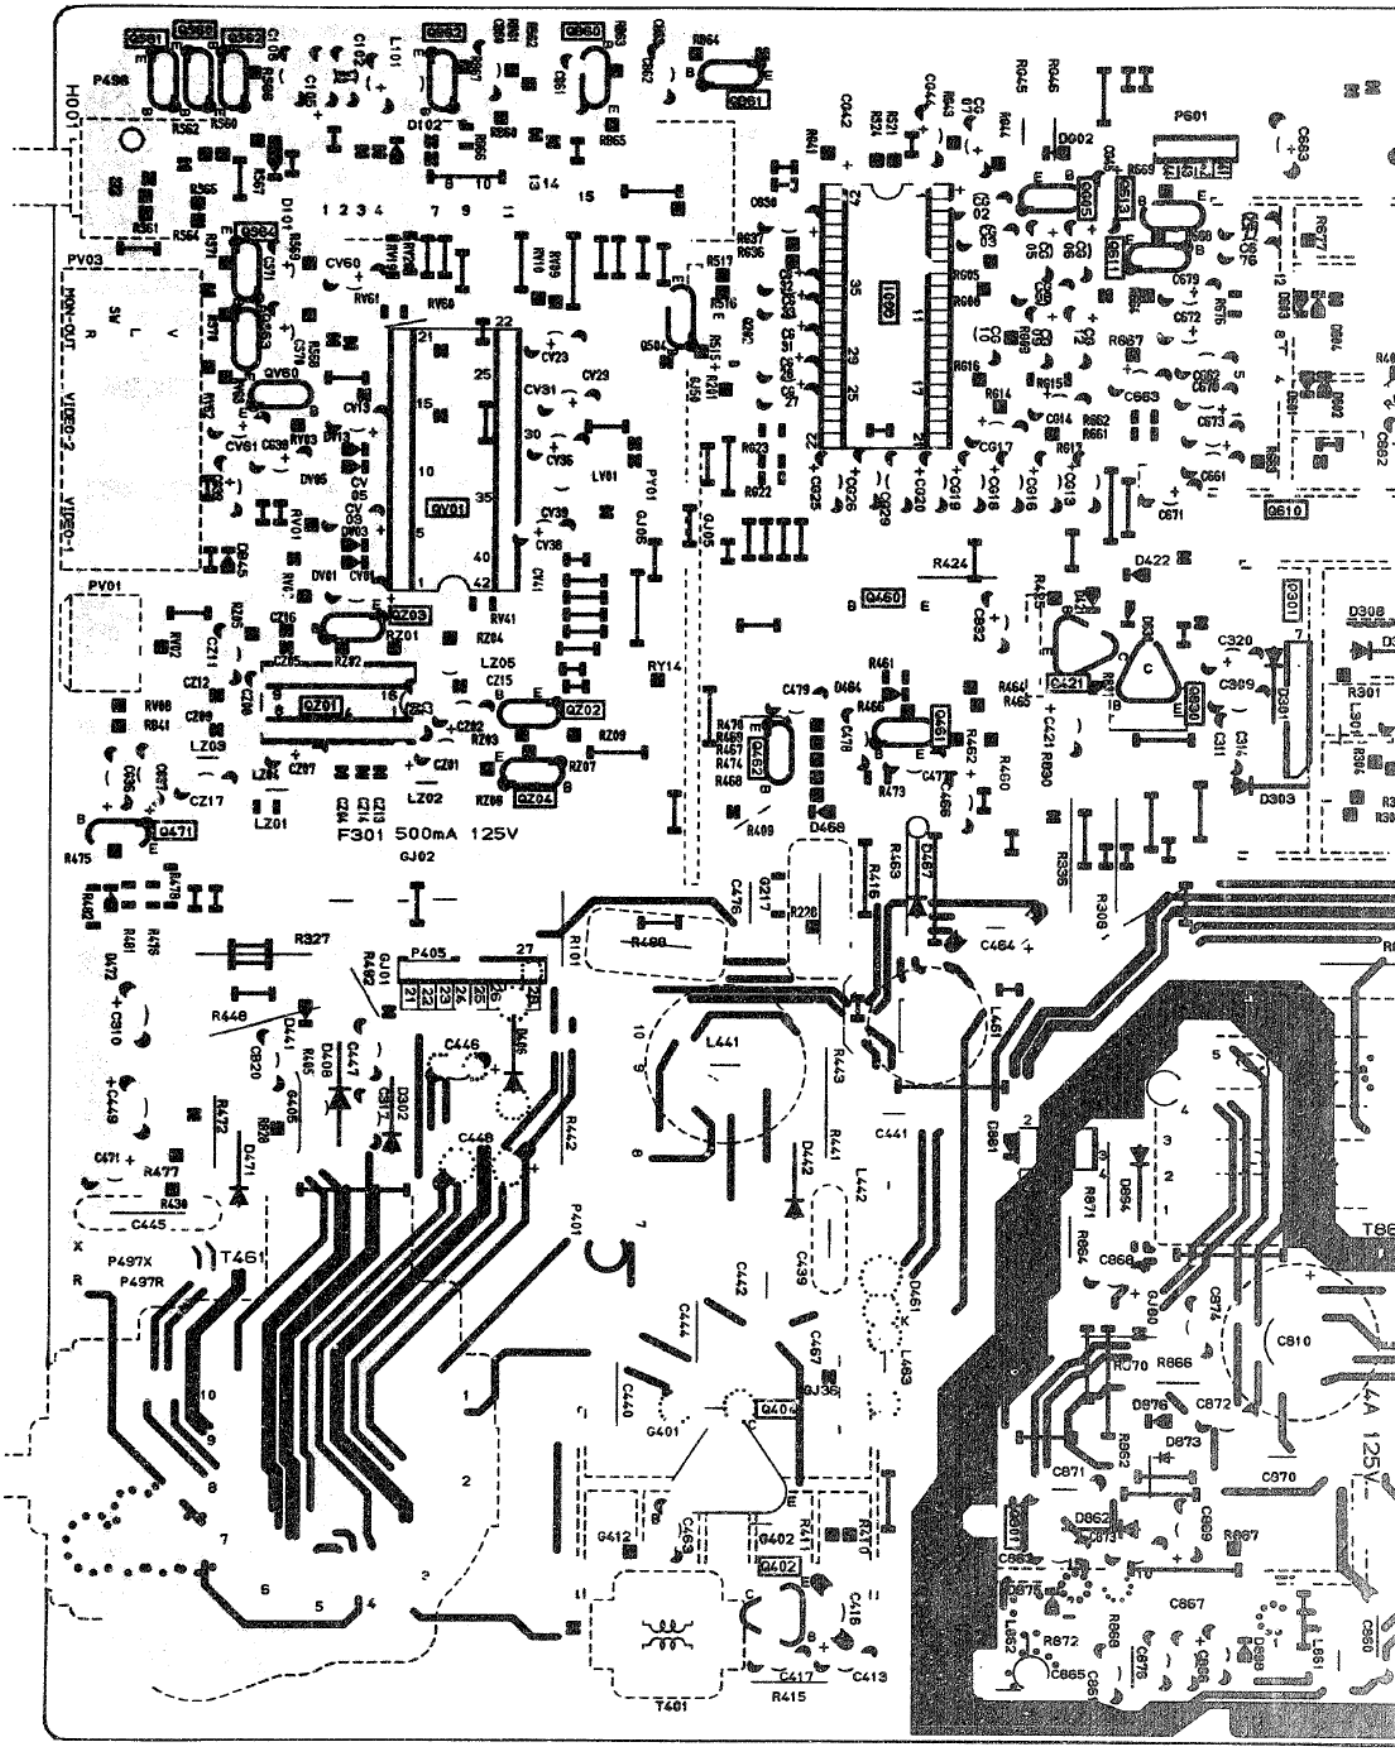

MAIN BOARD PB8021A

BOTTOM (FOIL) SIDE

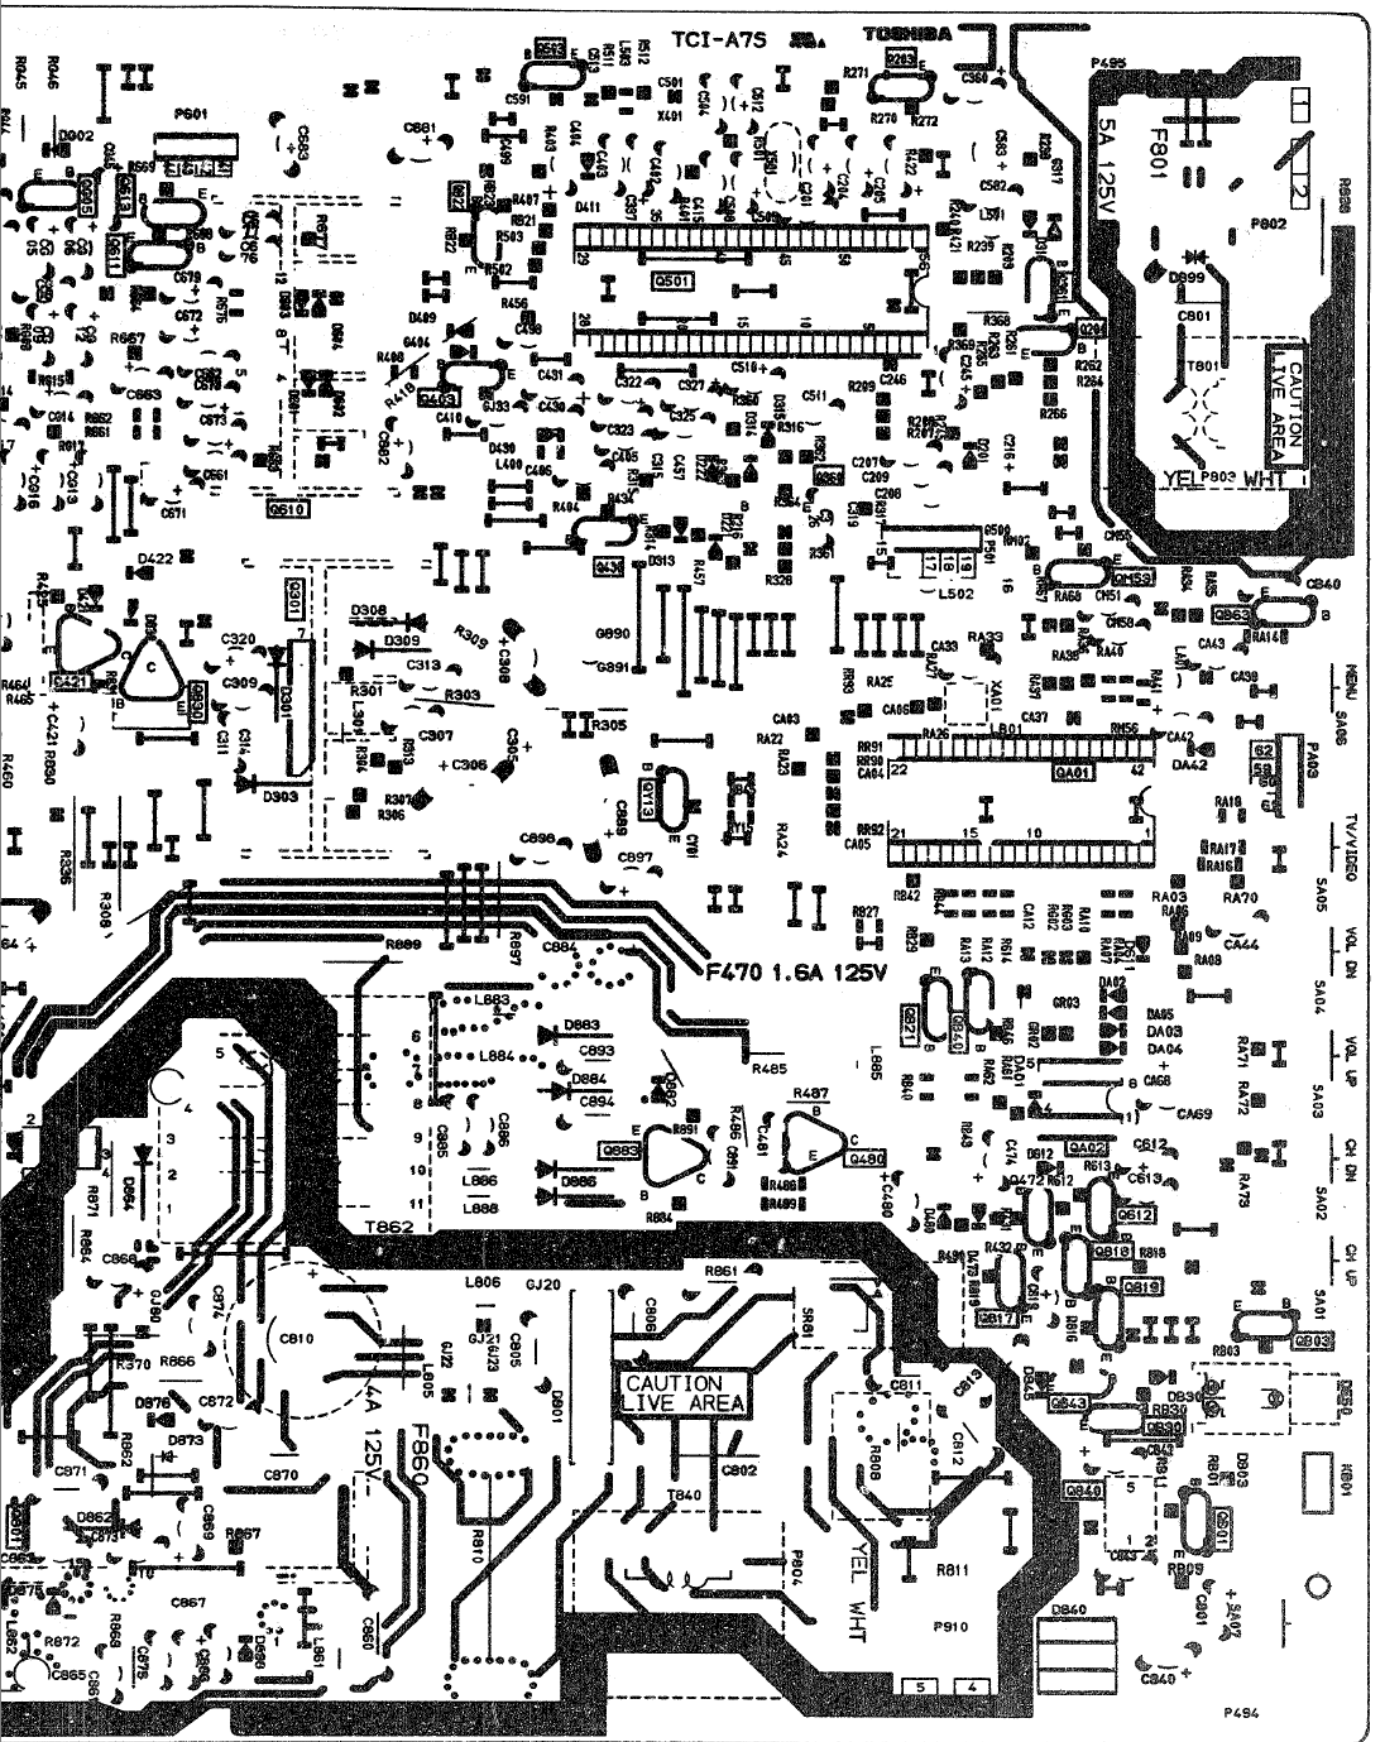

CRT DRIVE BOARD PB7809C

BOTTOM (FOIL) SIDE

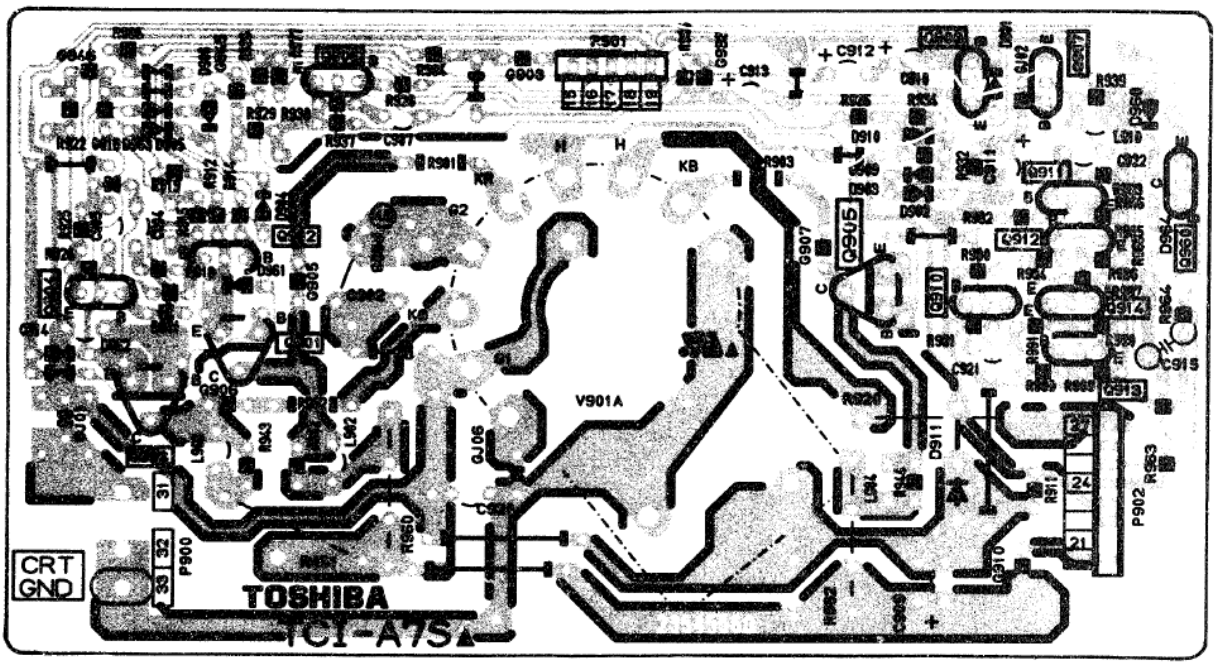

PIP BOARD PB7712

BOTTOM (FOIL) SIDE

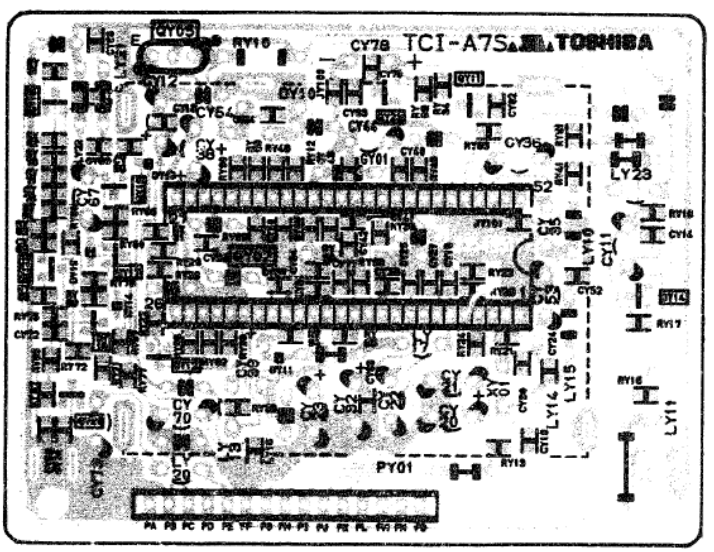

TERMINAL VIEW OF TRANSISTORS

① 2SD2253
(old)
2SC5243



② 2SC3852
2SD1763A
2SC1569
2SC4544
2SA1788
2SA1306
2SA1186A



③ 2SC752GTM
2SC2482
2SC2655
2SC4721P

④ 2SC752
2SA562TM
2SA1015
2SC1815
2SC2878
2SC1740S
2SC2120
2SA9335

⑤ 2SA1788



⑥ RN2203
RN2201
RN2004
RN1203
RN1204
RN2204
RN1205
RN1202
RN1201



⑦ 2SD1554
2SD2253
2SD1556
2SC5143



⑧ ON4409



MEMO

MEMO

SPECIFICATIONS (REPRESENTATIVE MODEL: CE27H15)

TELEVISION SYSTEM	NTSC standard
CHANNEL COVERAGE	VHF: 2 through 13 UHF: 14 through 69 Cable TV: mid band (A-8 through A-1, A through I) super band (J through W) hyper band (AA through ZZ, AAA, BBB) ultra band (65 through 94, 100 through 125)
POWER SOURCE	120V AC, 60Hz
POWER CONSUMPTION	CE27H15: 92W (average)
AUDIO POWER	5W + 5W
SPEAKER TYPE	2-3/8 x 4-3/4 inches (60 x 120 mm)
VIDEO/AUDIO TERMINALS	VIDEO/AUDIO INPUT (VIDEO1/VIDEO2) VIDEO: 1V(p-p), 75 ohm, negative sync. AUDIO: 150mV(rms) (30% modulation equivalent, 47k ohm) VIDEO/AUDIO OUTPUT VIDEO: 1V(p-p), 75 ohm, negative sync. AUDIO: 150mV(rms) (30% modulation equivalent, 4.7k ohm)
DIMENSIONS	CE27H15: Width 26-21/32 inches (677mm) Height 24-5/64 inches (612mm) Depth 21 inches (533mm)
MASS	CE27H15: 76.5 lbs (34.7kg)
SUPPLIED ACCESSORIES	Remote Control with 2 size "AAA" batteries
OPTIONAL TV STAND	CE27H15: —

Design and specifications are subject to change without notice.